


BWT Perla

Duplex water softening unit
Model: BWT PerlaMAXX deluxe softener

Subject to change without notice.

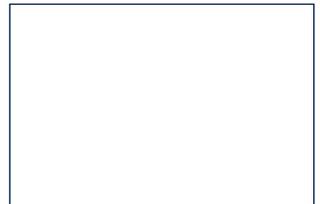

Thank you very much for the confidence that you have shown in us by purchasing a BWT product.



This manual applies only to the product(s) specified on the title page.

Publication details

BWT Holding GmbH

Walter-Simmer-Strasse 4
5310 Mondsee, Austria

Phone: +43 / 6232 / 5011 0

E-mail: office@bwt.at

bwt.com

BWT Wassertechnik GmbH

Industriestrasse 7
69198 Schriesheim, Germany

Phone: +49 / 6203 / 73 0

E-mail: bwt@bwt.de

bwt.com

This manual was created, reviewed and approved in German. If there are any discrepancies between the German edition of the manual and editions in other languages, the information in the German document should be given preference.

In the event of inconsistencies, contact our customer service; see chapter [“15.2 Your contact at BWT”](#), page 68.

All rights reserved (including for the translation). This manual or parts of it are not permitted to be reproduced, translated or reused in any other way without the written permission of the manufacturer.

The company and product names mentioned in this manual are usually registered trademarks of the respective companies.

Table of contents

1	Safety instructions	5	6.2.1	Connecting the water supply	17
1.1	General safety instructions	5	6.2.2	Establishing a sewage system connection	18
1.2	Validity of this documentation	5	6.3	Electrical connections	19
1.3	Personnel qualifications	5	7	General operation and display	19
1.4	Transport and installation	6	7.1	Opening the Easy Fill technology cover	19
1.5	Symbols used	6	7.2	Device status display	20
1.6	Warning displays	7	7.3	Closing the Easy Fill technology cover	20
1.7	Product-specific warnings	7	7.4	Touch display controls	20
1.8	Important notes on the product	7	8	Start-up	21
1.9	Materials used	8	8.1	Starting up	21
1.10	Definitions	8	8.2	Benefits of registering	23
2	Scope of delivery	10	8.3	Connection wizard	24
2.1	Product overview	10	8.4	User registration	24
2.2	Optional extras	11	8.5	Checking and adjusting the water hardness	25
3	Intended use	12	8.6	Completing the start-up procedure	25
3.1	Proper use	12	9	Connection	26
3.2	Foreseeable misuse	12	9.1	GSM – connection wizard	27
3.3	Disclaimer	12	9.2	LAN – connection wizard	28
3.4	Other applicable documentation	12	9.5	Checking the connection status	34
4	Function	12	10	Registration	35
4.1	Operation	12	10.1	Starting registration on the product	36
4.2	Regeneration	12	10.2	Completing registration online	37
4.3	Regenerative monitoring	13	11	Operation	38
4.4	Multi-info touch display	13	11.1	Home screen	38
4.5	Interaction	13	11.2	Messages	39
4.6	Connectivity	13	11.3	Menu overview	39
4.7	Safety	14	11.4	Settings	40
4.7.1	AQA Safe valve	14	11.4.1	General Information	40
4.7.2	AQA Alert warning functions	14	11.4.2	External modules	40
4.7.3	AQA Guard Wireless Sensor	14	11.4.3	Device configuration	41
5	Conditions for installation	14	11.4.4	Setting the water hardness	43
5.1	General	14	11.4.5	Registration	44
5.2	Installation location and environment	14	11.5	Functions	44
5.2.1	Installation conditions with pump	15	11.5.1	Regeneration/rinsing	44
5.2.2	Reception conditions at the installation location	15	11.5.2	Shut down/return to operation	45
5.3	Inlet water	15	11.5.3	Refilling operating materials	46
5.4	Functional and warranty conditions	15	11.5.4	Holiday mode	47
6	Installation	16	11.5.5	Maintenance	48
6.1	Installation diagram	17	11.6	Info	50
6.2	Connecting the product	17	11.6.1	Operating record	50
			11.6.2	Serial no. / PNO	51
			11.6.3	Consumption	52
			11.6.4	Connection status	53
			11.6.5	Device status	53

11.7	Help	54	16.2.2	Disposal of old devices	68
11.7.1	Contact person	54	16.2.3	Disposal of old batteries	68
11.7.2	FAQs	54			
11.7.3	Installation and operating instructions	54	17	Technical data	69
12	Additional functions	55	17.1	Dimensions	70
12.1	BWT Best Water Home app	55	17.2	Diagram of peak flow	71
12.2	Remote operation of the product via a direct Wi-Fi connection (access point)	56	18	Standards and legal provisions	72
12.3	Remote operation of the product via the home network (LAN / Wi-Fi)	57	19	Operating log	73
12.4	API (Application Programming Interface)	58	20	German Drinking Water Ordinance notice	74
13	Operator responsibilities	58	A	Appendix	75
13.1	Intended operation	59	A.1	Connection set, DN 32/32 DVGW	75
13.2	Checks	59	A.1.1	Intended use	75
13.3	Inspection	60	A.1.2	Conditions for installation	75
13.3.1	Inspection tasks	61	A.1.3	Installation	75
13.4	Maintenance in accordance with EN 806-5	62	A.2	Installation set for water softeners	77
13.5	Replacement of parts	63	EU Declaration of Conformity	78	
13.6	BWT expert maintenance	63			
13.7	Stoppages and re-activating the unit	63			
14	Troubleshooting	64			
14.1	Fault during start-up	64			
14.2	Fault during operation	66			
14.3	Faults affecting the additional functions	67			
15	Warranty	68			
15.1	Product returns	68			
15.2	Your contact at BWT	68			
16	Decommissioning and disposal	68			
16.1	Decommissioning	68			
16.2	Disposal	68			
16.2.1	Disposal of the transport packaging	68			

1 Safety instructions

1.1 General safety instructions

The product was manufactured in accordance with generally accepted rules and standards of technology and complies with the legal regulations at the time it was placed on the market.

Nevertheless, there is still a risk of damage to persons or property if you do not follow this chapter and the safety instructions in this documentation.

- Read this documentation carefully and in its entirety before working with the product.
- This documentation must be kept accessible to all users at all times.
- Always hand over the product to third parties together with the full documentation.
- Follow all of the instructions in relation to the proper handling of the product.
- If you detect damage to the product or the mains supply, stop its operation and notify a service technician immediately.
- Use only accessories, spare parts and consumable materials that have been approved by BWT.
- Adhere to the environmental and operating conditions specified in the "Technical data" section.
- Use your personal protective equipment. It ensures your safety and protects you from injury.
- Perform only tasks that are described in these operating instructions or that you have been trained to do by the manufacturer.
- Perform all tasks in compliance with all applicable standards and provisions.
- Instruct the operator in the function and operation of the product.
- Instruct the operator in the maintenance of the product.
- Instruct the operator in relation to potential dangers that may arise while operating the product.

1.2 Validity of this documentation

This documentation applies exclusively to the specified product. See the label on the title page.

This documentation is intended for operators, installers without training from the manufacturer, installers with training from the manufacturer (e.g. drinking water specialists), and service technicians.

This documentation contains important information for fitting the product safely and properly, starting up, operating, using, maintaining, and disassembling the product, and for correcting simple faults independently.

Read this documentation in full before working with the product. Pay particular attention to the chapter "Safety Instructions".

1.3 Personnel qualifications

The installation activities described in this manual require basic knowledge of mechanics, hydraulics and electricity, as well as knowledge of the associated technical terms.

To ensure that the device is installed safely, this work must be performed only by a qualified specialist or a trained person under the guidance of a qualified specialist.

A **qualified specialist** is someone who can assess the work assigned to him or her, identify potential risks and take suitable safety measures thanks to his or her specialist training, knowledge and experience, as well as his or her knowledge of the applicable regulations. Specialists must comply with applicable, industry-specific regulations.

A **trained person** is someone who has been instructed by a qualified specialist in the tasks entrusted to them and the potential dangers of improper conduct and, if necessary, trained and instructed on the necessary protective equipment and protective measures.

1.4 Transport and installation

To avoid damage during transport to the installation location, do not remove the product from the packaging until you have reached the relevant location. Then dispose of the packaging in the correct manner. Check that the delivery is complete.

When there is a risk of frost, empty all water supply parts.

Lift or transport the product or its components only from the designated suspension eyes or attachment points.

Install or mount the product on a sufficiently strong and level horizontal surface and adequately secure it against falling or tipping.

1.5 Symbols used

The following symbols in this documentation indicate specific sources of danger or important information:

	General danger to persons, systems or the environment.
	Danger caused by the mains voltage. Risk of death by electric shock!
	Magnetic field in the Easy Fill technology cover of the product!
	Instructions must be observed for safe operation.
	Remove the mains plug.
	Information that must be observed.
	The product must not be disposed of in household waste.
	Recycle the product after decommissioning.

1.6 Warning displays

In this document, warnings precede any sequence of actions that could cause harm to persons or damage to property. All hazard prevention measures must be followed.

Warnings are displayed as follows:

 SIGNAL WORD!	
	<p>Source of hazard (e.g. electric shock)</p> <p><i>Type of hazard (e.g. risk of fatal injury)!</i></p> <p>► Ways to prevent the hazard</p>

Signal word	Colour	Severity of the hazard
DANGER		<p>High-risk hazard.</p> <p>Indicates a hazardous situation which, if not avoided, will result in death or serious injury.</p>
WARNING		<p>Hazard with a moderate degree of risk.</p> <p>Indicates a hazardous situation which, if not avoided, could result in death or serious injury.</p>
CAUTION		<p>Low-risk hazard.</p> <p>Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.</p>
NOTE		<p>Warns of material damage to the product and/or the environment.</p>

1.7 Product-specific warnings

 DANGER!	
	<p>Mains voltage!</p> <p><i>Risk of death by electric shock!</i></p> <p>► Unplug device before any service and repair work.</p> <p>► If the product's power connection cable is damaged, it must be replaced with the original connection cable from the manufacturer.</p> <p>► Do not connect the product to the mains before start-up.</p>
	

In the chapters below, you will find product-specific warnings whenever you must perform safety-relevant actions on the product.

1.8 Important notes on the product



The product must be installed as described in the installation guide in compliance with the general requirements for the supply of water in Germany ["AVB Wasser"] V, section 12.2 by a water supply company or by a party registered in the water supply company's index of fitters.

- In accordance with the German Drinking Water Ordinance, inform fellow occupants about the installation and functionality of the product and about the regenerative used.

Using treated drinking water with plants and aquatic animals

Each species of plant and aquatic animal requires water that contains a special combination of substances.

- Consult the standard literature and check whether treated drinking water can be used for watering plants or for filling ornamental lakes, aquariums or fish ponds.

Handing over the product to the operator



If there is a delay between installation / start-up of the unit and transfer to the operator, the softening columns must be regenerated manually.

- ▶ Inform the operator about the function, operation and maintenance of the product.
- ▶ Provide the operator with all instructions and additional information belonging to the product.

1.9 Materials used

The metallic materials used are lead-free and approved for contact with drinking water. The plastics used are suitable for contact with drinking water and their suitability is monitored by accredited independent institutions.

1.10 Definitions

Inlet water: Drinking water quality of the local water supplier. Depends on the region and is described using the degrees of hardness soft, medium or hard.

Softened water: Softened water, usually with water hardness of 0 – 9 °dH.

Outlet water: The water leaving the softening unit.

Luxury water: Water quality with water hardness of 4 – 6 °dH as recommended by the manufacturer

Blended water: The product mixes (blends) fully softened soft water with inflow water to attain the desired outlet water.

Fully softened water: Water treated by the product with no added inflow water. Hardness value of 0.1 – 2.5 °dH.

Microbiological and sensory quality of the (partially) softened water

The quality of the treated water depends greatly on the conditions under which the product is installed and operated. The most important factors are listed in the following table.

	Unfavourable conditions	BWT recommendations
Quality of the inflow water	Unsuitable and marginal quality inflow water may not be altered by the product.	Contact a BWT service technician or fitter.
Operating conditions	Long periods of stagnation, low water extraction and incorrect product design may affect the quality of the luxury water.	Observe the notes in the installation and operating manual. Contact a BWT service technician or fitter.
Quality of the regenerative	Impurities from inferior regeneratives with insoluble components cause deposits.	Use of BWT Perla tabs or regeneratives in accordance with DIN EN 973, type A.
Installation situation and conditions	Temperatures in the installation room greater than 25 °C, evaporation of solvents or an improper waste water connection may adversely affect the quality of the luxury water.	Observe the notes in the installation and operating manual.


When determining whether there is a problem with the sensory or microbiological quality of the treated water, it is important where in the system the quality is measured. For example, if the quality is measured at the tap, the water quality may be affected by the pipe material or by the presence of a water heater or hot water storage tank.

2 Scope of delivery

- BWT PerlaMAXX deluxe softener



The scope of delivery and illustrations may differ from the total scope specified here depending on the country. Optional components are marked with the * symbol.

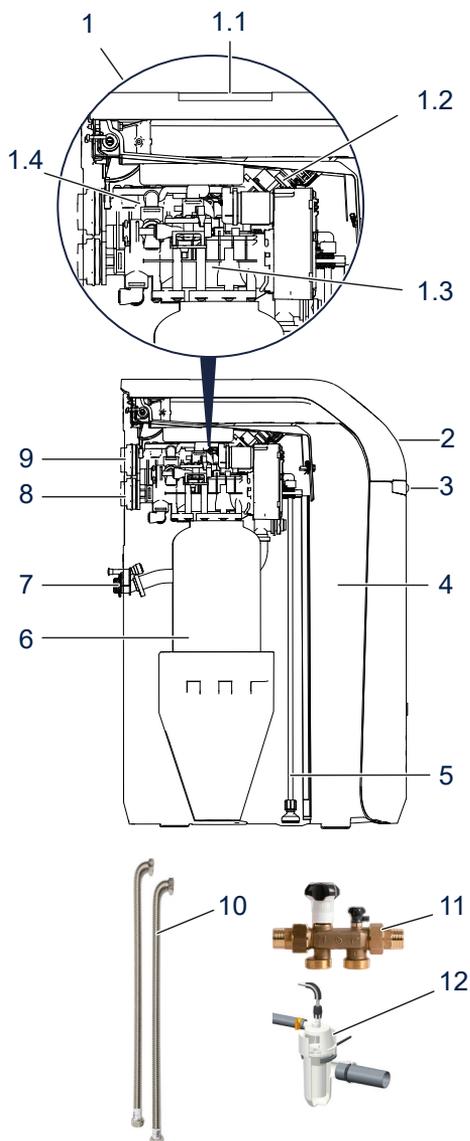

2.1 Product overview

1	1.1 Control with multi-info touch display
	1.2 Blending valve with actuator
	1.3 Two multiple-way control valves
	1.4 Water meter for partially softened water
2	Easy Fill technology cover with LED status display
3	Proximity sensor
4	Integrated regenerative container
5	Brine suction system
6	Softener columns with ion exchange material
7	Waste water connection
8	Water inlet with non-return valve
9	Water outlet
–	2 m rinsing water hose
–	2 m overflow hose, 18 x 24
–	Fasteners
*	Floor sensor for detecting a film of moisture (not shown)
*	BWT AQA test – hardness monitoring device
*	BWT luxury water test strips for monitoring the quality of the luxury water

10*	Connection set, DN 32/32 DVGW
11*	Connection fitting with integrated bypass
12*	BWT installation set

2.2 Optional extras

(Not on list of supplied parts)

Order no.



- BWT Bewasol brine lifting system

11808

To ensure that the BWT Bewasol brine lifting system is used properly, you must ensure that the overflow connection on the product is higher than the connection for the overflow hose on the BWT Bewasol. The product may have to be raised for this purpose.



- AQA Guard Wireless Water Sensor

11772

(required accessories for the AQA Guard function)

- LTE antenna, cable length of 3 m
- Fault signal cable ZLT


1-444528

1-433090

Mineral metering units

(Not on list of supplied parts)

Order no.

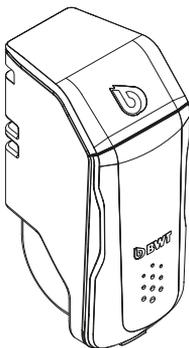

- BWT Smart Dos DT Plus
- BWT Smart Dos CT Plus

125564215

125564216

3 Intended use

3.1 Proper use

This product is intended for the partial softening of drinking and service water. It is also designed to prevent malfunction and damage caused by calcification in water pipes and the connected fittings, devices, boilers and other equipment.

The performance specifications of the product must match the expected usage conditions. For more information, see DIN 1988-200 and the technical data in this installation and operating manual (see chapter “17 Technical data”, page 69).

If the product is intended for a commercial application, a consultant from the manufacturer must conduct a test and issue an approval.

Operation of the product only with regular function checks and the performance of the maintenance measures required to ensure the safe operating condition of the product in accordance with the operating conditions for planning and construction.

3.2 Foreseeable misuse

- Failure to use the product over a longer period of time (7 days as per DIN EN 8065).
- Failure to maintain the ambient conditions and operating conditions (see chapter “17 Technical data”, page 69).
- Failure to comply with the maintenance and service intervals specified in this manual.
- The use of unauthorised consumables and spare parts.

3.3 Disclaimer

Deliberate or forceful removal, wilful modification or circumvention of existing protective or safety devices, failure to follow the instructions in this operating manual or on the product release the manufacturer from any liability.

3.4 Other applicable documentation

- Data protection notice
- Material safety data sheets

4 Function

The product BWT PerlaMAXX deluxe softener is a duplex water softener based on the ion exchange principle. The product is filled with organic ion exchange material.

4.1 Operation

- Adaptive parallel operation via two softening columns allows for maximum soft water availability and minimises stagnation in the softening columns.
- Regeneration is triggered volumetrically (depending on the quantity of water). This means that no remaining supply of softened water is discarded during regeneration.
- During regeneration, only one softening column is available, which handles the entire softening process.
- Ideally, the regeneration time occurs at night, as water consumption is usually lower during this period.
- If the capacity falls below 50% before the query time, proportional regeneration starts immediately.
- If the capacity does not fall below 50% until after the query time, the control system assumes that the remaining capacity is sufficient to last until the regeneration time.
- Regeneration begins immediately if the capacity is exhausted; otherwise it starts at the selected regeneration time.

4.2 Regeneration

- Exchange of hardness forming substances Ca and Mg ions for Na ions from the regenerative at the ion exchanger.
- A precision brine meter measures out the brine required.
- The product is equipped with a device that disinfects the ion exchange material during regeneration.
- By measuring data acquisition during brine extraction, the regeneration process is adapted to the respective pressure conditions, the regenerative and regeneration water consumption is reduced to the required minimum.
- The optimised brine preparation process produces as much brine as needed for regeneration in less than 0.5 hours.
- The brine collects in a special sink of the regenerative container and is fully extracted from there. After brine extraction, there is no liquid left in the regenerative container.

- An ultrasound sensor in the Easy Fill technology cover measures the regenerative level.
- The regeneration is proportional. 100% regeneration takes place after 72 hours at the latest for hygiene purposes.

4.3 Regenerative monitoring

- 100% in the multi-info touch display corresponds to a regenerative filling level of approx. 46 cm.
- From a level of around 20%, the device status indicator changes from “blue” to “yellow” to signal a need to refill the regenerative.

4.4 Multi-info touch display


The product is equipped with a touch display. It can be operated intuitively and provides a quick overview of all product parameters.

During start-up, you can select basic parameters on the display:

- Country-specific settings at the location of operation
- Unit for measuring water hardness at the location of operation (°dH, °f, mol/m³, ppm calcium carbonate)
- Inflow water hardness:
 - Manual entry
 - Transfer of the value defined for the operating location in the **hydromaps** water hardness database (if available and possible only for registered products; see chapter “10 Registration”, page 35)
- Desired outlet water hardness

Depending on your settings, you will see the current parameters on the display during operation:

- Current flow volume in l/h (fully softened water plus blended water)

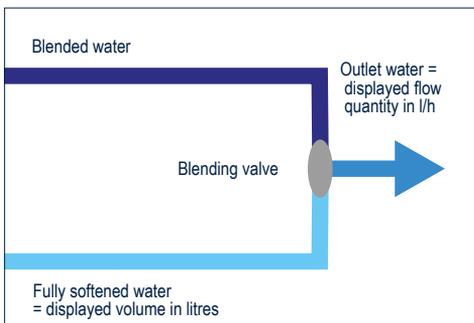

A comparison of the displayed volumes using a domestic water meter is not possible.

- Water and regenerative consumption
- Regenerative level (via ultrasound sensor in the Easy Fill technology cover)
- Reminders for filter backwashing, filter change and other maintenance work

4.5 Interaction

A BWT mineral metering unit can be plugged into the unit at any time.

Up to 10 AQA Guard Wireless water sensors (order no. 11772) can be taught in.

4.6 Connectivity

Various functions may be available depending on the product and market:

- GSM connection to the server for full functionality and database updates.
- Wi-Fi or LAN connection to your local network to control and monitor the product via PC, smartphone or tablet.
- EnOcean® interface for the AQA Guard function.
- API interface for integrating the product into a smart home environment or building management system.

Connectivity extends the functionality of the product and allows the product to be registered in order to use advanced operating and maintenance functions via the **BWT Best Water Home app**.



Depending on the product, not all types of connectivity are available.

4.7 Safety



Depending on the product, not all the safety functions are available.

4.7.1 AQA Safe valve

- The AQA Safe valve closes in the event of a power failure and thus protects against water damage caused by rinsing water, especially when the rinsing water is being drained by a pump that stops functioning when the power fails.

4.7.2 AQA Alert warning functions

AQA Watch

- The programmable AQA Watch alarm function monitors the water supply to the building and issues a warning message if low flow rates (< 60 l/h) over a longer period of time (> 10 minutes) indicate a problem in the pipe network (e.g. leakage, dripping drain tap or leaky toilet cistern).

AQA Volume

- The water volume monitor will trigger if too much softened water flows into the unit. If the maximum level is exceeded, the water supply system in the direction of flow is shut off downstream of the product. A sensible maximum level must be chosen for the unit to function correctly. The set quantity must be lower than the maximum capacity of the system in litres.

AQA Max Flow

- The water volume monitor will trigger if too much softened water flows into the unit over a short period of time. If the maximum level is exceeded, the water supply system in the direction of flow is shut off downstream of the product. A sensible maximum level must be chosen for the unit to function correctly. The set quantity must be lower than the maximum capacity of the system in litres.

4.7.3 AQA Guard Wireless Sensor

- Installation of up to 10 AQA Guard Wireless Water Sensors (order no. 11772) in the building to receive an alarm message in case of leakage.



The maximum distance between the AQA Guard Wireless Sensor and the product depends on the building architecture, the installed material and other external influences.

5 Conditions for installation

5.1 General

The product must be installed as described in the installation guide in compliance with the general requirements for the supply of water in Germany ["AVB Wasser"] V, section 12.2 by a water supply company or by a party registered in the water supply company's index of fitters.

Observe all applicable local installation regulations, general guidelines, sanitary requirements and technical specifications.

5.2 Installation location and environment

Softening units may not be installed in systems that provide water for fire extinguishing purposes.

The installation location must meet the following criteria:

- Flat surface without an incline.
- Protected against frost, chemicals, dyes, solvents and fumes.
- Easy to connect to the water supply system.
- Sufficient clearance to open the technology cover. (For minimum clearance, see chapter "[17.1 Dimensions](#)", page 70. The clearance should be more generous for easy replenishment of the regenerative).

In addition, the installation room must have a surface that is moisture-resistant. Building sealing measures must be used, such as special joint materials and sealing tapes.

NOTE



► A sewage system connection, floor drain and separate power supply must be available in the immediate vicinity. For power supply data, see chapter "[17 Technical data](#)", page 69.

If there is no floor drain and the softening unit does not have an integrated AQA Stop function, a separate safety device will have to be installed on site in the direction of flow upstream of the softening unit.

This safety device (e.g. external AQA Stop) has to shut off the water supply when there is no current in order to prevent unintended water leakage from the softening unit if the product is damaged.

The rated mains power and the requisite operating

pressure must be present at all times. For data, see chapter [“17 Technical data”, page 69](#). A separate means of protection against a shortage of water is not provided and must be installed on site if desired.

5.2.1 Installation conditions with pump

If the flushing water is fed into a pump, the pump must be appropriately equipped and sized:

- The pump must be salt-water resistant.
- Flow rate at least 2 m³/h or 35 l/min for products for building services.
- Flow rate at least 3 m³/h or 50 l/min for products in the Rondomat range.
- Appropriate larger sizing if the pump is used simultaneously for other products.

5.2.2 Reception conditions at the installation location

To benefit from the connectivity of the product, either GSM reception or connection to a network via LAN or Wi-Fi must be available at the installation location (see chapter [“9 Connection”, page 26](#)).

5.3 Inlet water

The inflow water must always comply with the requirements of the German Drinking Water Ordinance and Directive (EU) 2020/2184 on the quality of water intended for human consumption. The total dissolved iron and manganese must not exceed 0.1 mg/l. The inflow water must always be free of air bubbles. Install a bleed device if necessary.

If the treated water is intended for human consumption as defined in the Trinkwasserverordnung (German Drinking Water Ordinance), the ambient temperature must not exceed 25 °C.

If the treated water is intended for industrial purposes only, the ambient temperature must not exceed 40 °C.

The formation of a vacuum in the product, for example through a downstream pressure boosting system, must be ruled out.

The product's maximum operating pressure must never be exceeded (see chapter [“17 Technical data”, page 69](#)). If the network pressure is higher, a pressure reducer must be installed upstream of the product.

The product requires a minimum operating pressure to function correctly (see chapter [“17 Technical data”, page 69](#)).

The optimal operating pressure is between 3 and 6 bar.

5.4 Functional and warranty conditions

Softening units require regular functional monitoring, maintenance and the replacement of important parts after certain intervals.

The amounts of metering substance and regenerative required are subject to the level of consumption, which depends on operating conditions.

Softening units must be cleaned regularly and also disinfected if necessary. See this installation and operating manual for the maintenance intervals. We recommend that you enter into a maintenance agreement.

During pressure fluctuations and surges, the sum of the pressure surge and the standing pressure must not exceed the nominal pressure. The positive pressure surge must not exceed 2 bar and the negative pressure surge must not be less than 50% of the self-adjusting flow pressure (see DIN 1988200/3.4.3).

Continuous operation of the softening unit with water containing chlorine or chlorine dioxide is possible if the concentration of free chlorine/chlorine dioxide does not exceed 0.5 mg/l.

Continuous operation with water containing chlorine or chlorine dioxide can lead to premature ageing if an organic ion exchange material is used. A softening unit can reduce the concentration of free chlorine and chlorine dioxide. In other words, the concentration in the outflow of a softening unit is generally considerably lower than in the inflow.

In order to benefit from the product's connectivity-based features, one of the following must be present at the installation location:

- GSM signal strength between -40 and -89 dBm
- Wi-Fi signal strength between -20 and -89 dBm
- Network connection with RJ45 socket within 1.5 m


6 Installation

The following conditions must be met before the product can be installed:


- The pipeline network must be rinsed.
- You must check whether a mineral metering device needs to be installed downstream from the product for the purpose of preventing corrosion.
- Corrosion-resistant pipe materials are used for installation. Pay attention to corrosion-causing chemical properties when different pipe materials are combined (mixed installation), even in the inflow direction upstream of the product.
- A protective filter must be installed in the direction of flow 1 m upstream of the product. The filter must be functional before the product is installed. This is the only way to ensure that dirt and corrosive particles do not enter the product.
- Suitable taps for sampling must be installed upstream and downstream from the product in accordance with the specifications of VDI 6023.
- The hose attached to the overflow point of the regenerative container and the rinsing water hose must be routed at an incline to the sewage system. If this is not possible, a secure connection to the sewage system must be established via a pump.
- According to EN 1717, the rinsing water hose and the overflow hose must be connected to the sewage system at a specified distance above the highest possible waste water level. (Distance is greater than the diameter of the drain pipe.)
- The product must be placed in a horizontal position. Make sure that the surface is level.

6.1 Installation diagram

An example is shown in the figure. The symbols are displayed in accordance with EN 806-1. The individual installation must be adapted to local conditions.

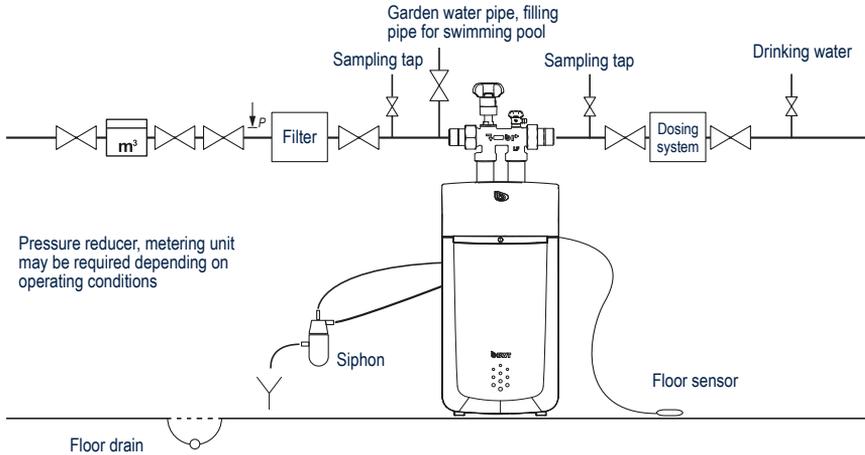

Connection fitting

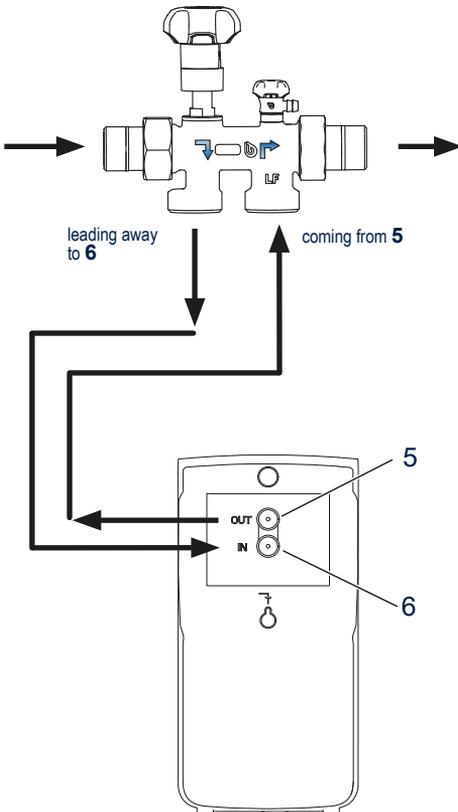

6.2 Connecting the product


6.2.1 Connecting the water supply

Connect the product to a suitable connection fitting with integrated bypass.



The following descriptions are based on the installation and use of the BWT connection fitting.

- ▶ Read the installation instructions for the connection fitting. Failure to do so will void the warranty in the event of damage; see "[A Appendix](#)", page 75.
- ▶ Connect the connection fitting according to the adjacent diagram while observing the arrows indicating the direction of flow.
- ▶ Connect a corrugated hose to the outlet of the connection fitting.
- ▶ Connect the corrugated hose to the product's inflow water connection **IN (6)** with a seal.
- ▶ Connect the other corrugated hose with a seal to the product's outlet water connection **OUT (5)**.
- ▶ Connect this corrugated hose to the inlet of the connection fitting.

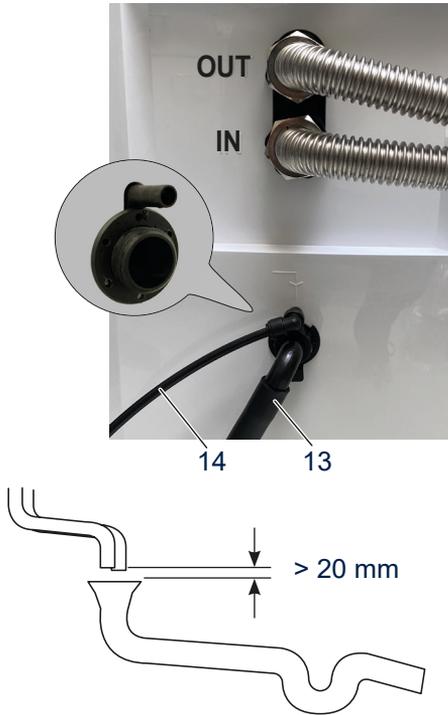

6.2.2 Establishing a sewage system connection

- ▶ Connect the \varnothing 24 mm overflow hose (13) to the overflow connection.
- ▶ Route the overflow hose with an incline of at least 10 cm to the sewage system connection (drain), or connect it to the included instructions and fasten it sufficiently.
- ▶ Connect the \varnothing 8 mm rinsing water hose (14) to the product.
- ▶ Route the rinsing water hose to the sewage system connection (drain) or connect it to the included siphon.
- ▶ Check the plug connection by pulling the connector back slightly.

NOTE



- ▶ In accordance with EN 1717, the rinsing water and overflow hoses must be connected to the sewage system at least 20 mm above the highest possible waste water level (unimpeded drainage).
- ▶ The flushing water and overflow hoses must not be connected or constricted at any point.

- ▶ Open the handwheel (bypass) on the connection fitting.
- ▶ Place the floor sensor on the floor.

6.3 Electrical connections

! DANGER!



Electrical voltage!

Risk of death by electric shock!

► Do not connect the product to the mains before start-up.

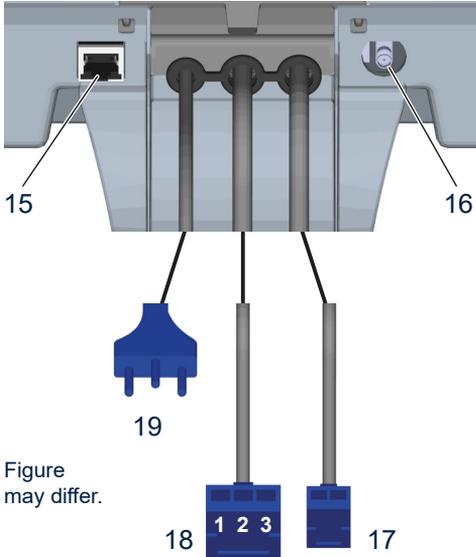


Figure may differ.


The following connections are available at the rear of the Easy Fill technology cover:

15	LAN (RJ45) connection
16	GSM antenna connection (optional, at low signal strength)
17	Metering connection (2 pin)
18	Fault signal contact connection (3 pin), potential-free changeover contact (max. 24 V / 0.5 A) Terminal assignment: Terminal 1-2 closed during operation Terminal 3-2 closed during fault
19	Network cable (country-specific)

Only connect the product to the power supply when starting it up.

7 General operation and display

The touch display switches off in sleep mode (energy-saving mode).

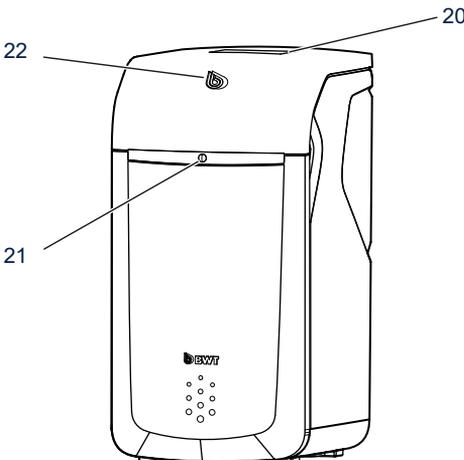

20	Touch display
21	Proximity sensor
22	Device status display

7.1 Opening the Easy Fill technology cover


The Easy Fill technology cover is equipped with a magnetic locking system.

► Reach into the recesses on the left and right sides of the Easy Fill technology cover and then pull it up slightly.

7.2 Device status display

The colour of the BWT logo on the technology cover indicates the device status:

	Lit blue	Normal operation
	Flashing blue	Level measurement in progress (regenerative level > 20%)
	Lit yellow	Notification (e.g. regenerative < 20%)
	Flashing yellow	Level measurement in progress (regenerative level ≤ 20%)
	Lit red	Fault (e.g. AQA Stop Sensor triggered)

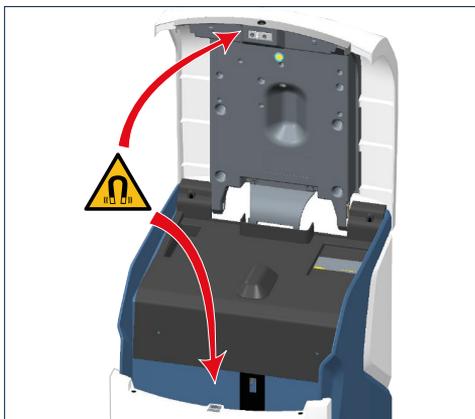

7.3 Closing the Easy Fill technology cover

- ▶ Press the Easy Fill technology cover down gently until it shuts.

7.4 Touch display controls

	Menu
	Next / Next page
	Back / Previous page
	Start page / Status overview
	Regeneration in progress
	GSM signal strength
	LAN
	Wi-Fi signal strength
	Server connection active

The touch display provides important information and can be operated intuitively.

It switches on automatically by tapping the display once.

If it is not used, it switches off after an adjustable time (energy-saving mode).

8 Start-up

8.1 Starting up

- ▶ Insert the mains plug.
The start-up assistant is activated.
- ▶ Tap the Country field.



The display illustrations for your product depend on the respective scope of delivery and may differ from the illustrations in this manual.

- ▶ First select your continent.

Display settings

Country



< Continent

Europe ✓

Asia

Australia/Oceania

North America

- ▶ Then select your country.

< Country

United Kingdom ✓

Österreich

Danmark

Schweiz

Display settings

Country

Language

Hardness unit

:: 2.0107

CONTINUE

Display settings


- ▶ If required, select a different language.
- ▶ If required, select a different unit for the water hardness.
- ▶ Press **CONTINUE**.

Start screen

- ▶ Press **CONTINUE**.


Welcome to your start-up assistant

CONTINUE

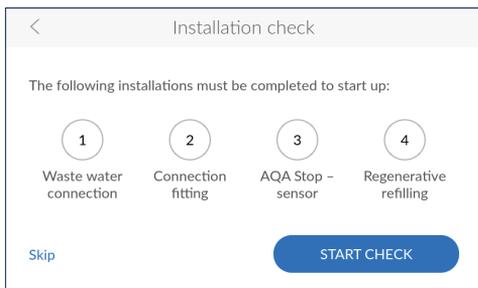

The installation check verifies that your product is properly connected.

► Press **START CHECK** to begin.

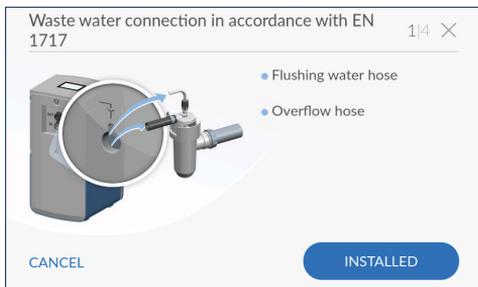

Installation check 1/4: Waste water connection according to EN1717

► Check that the waste water hoses are connected properly (see chapter [“6.2.2 Establishing a sewage system connection”](#), page 18).

If all criteria for correct installation are satisfied:

► Press **INSTALLED**.



Installation check 2/4: Ports on the connection fitting

► Ensure that the hoses for the inflow and outlet water at the connection fitting are correctly connected (see chapter [“6.2 Connecting the product”](#), page 17).

► Open the connection fitting by turning the handwheel anti-clockwise until it stops. Rinsing of the product starts.

If all criteria for correct installation are satisfied:

► Press **INSTALLED**.




Installation check 3/4: AQA Stop Sensor

► Check the connection and position of the floor sensor (see chapter [“6.1 Installation diagram”](#), page 17).

If all criteria for correct installation are satisfied:

► Press **CONFIRM**.

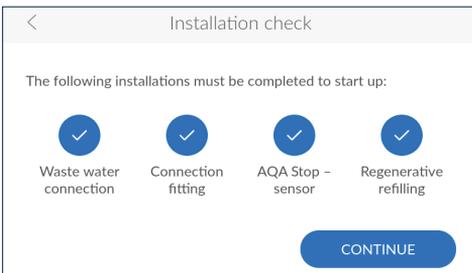

Installation check 4/4: Refilling the regenerative

- ▶ Reach into the recesses on the left and right sides of the Easy Fill technology cover and then pull it up slightly.
- ▶ Add up to 30 kg of regenerative (regenerative tablets in accordance with DIN EN 973 type A) to the regenerative container. The maximum level of 100% on the display corresponds to a filling level of approx. 46 cm.

Caution: Do not fill with water!

- ▶ Close the Easy Fill technology cover.

NOTE



- ▶ When filling the regenerative, make sure that impurities do not get into the regenerative container or locking system (red circle).
- ▶ Overfilling past the 100% mark can result in implausible fill level values being reported. Remove regenerative in case of overfilling.
- ▶ The product must not be operated with Sanitabs or Sanisal.
- ▶ Additional information can be found in chapter "11.5.3 Refilling operating materials", page 46.

- ▶ Press **CONFIRM**.

Completing the installation check

The installation check is completed successfully when all four icons are blue.

- ▶ Press **CONTINUE**.

The start-up flushing runs in the background.

The product registration starts.

8.2 Benefits of registering

You can only use all BWT services if you register your product:

- Using the Best Water Home app
- Advanced services
- Regular software updates
- Using the API interface
- Operating materials subscription
- Documentation
- Diagnostic function

- ▶ Press **START REGISTRATION**.



If you do not want to register the product, exit the connection wizard by pressing **X** in the header.

8.3 Connection wizard

If you perform registration during start-up, the connection wizard starts automatically and you can skip the following text section.

If you want to register later, you must start the connection wizard manually.

The connection wizard supports setting up the connection type that the product uses to connect to the Internet.

Connection wizard

- GSM ⓘ Good signal >
- LAN ⓘ Connected >
- Wi-Fi ⓘ Not connected >

More detailed information on the respective connection type can be found in the following chapters:

- “9.1 GSM – connection wizard”, page 27
- “9.2 LAN – connection wizard”, page 28
- “9.3 Wi-Fi – connection wizard”, page 30



If you do not want to connect the product to the Internet, exit the connection wizard by pressing **X** in the header.

8.4 User registration

User registration starts if the connection was successfully established.

- ▶ Tap inside the text box. A keypad is displayed.
- ▶ Enter your e-mail address.
- ▶ Check the box to confirm that you have read and understood the privacy policy.
- ▶ Press **CONTINUE**.
- ▶ Enter your e-mail address again. Double entry eliminates input errors.
- ▶ Press **CONTINUE**.

User registration

E-mail of system operator: test@test.com

The system operator has acknowledged the privacy policy.

The system operator will receive a copy of the privacy policy at the e-mail address provided. This will complete the agreement process. ⓘ

CANCEL CONTINUE

Entering the postcode

Entering the postcode will automatically determine the water hardness from the **hydromaps** water hardness database for the installation location of your product.

- ▶ Tap inside the text box. A keypad is displayed.
- ▶ Enter the postcode of the installation location of your product and press Enter to confirm your entry.

Enter postcode

Country: Deutschland

Postcode: 69198 - Schriesheim

District: Schriesheim

CANCEL CONTINUE

Selecting the district

- ▶ Select your district if applicable.
- ▶ Press **CONTINUE**.

8.5 Checking and adjusting the water hardness

For registered products, the inflow water hardness is taken from the **hydromaps** water hardness database (if available). Check that the database value matches the water hardness at the installation location and adjust the value for the inflow water hardness if necessary.

- ▶ If necessary, press **ENTER VALUE MANUALLY**.
- ▶ Enter the water hardness at the installation location.
- ▶ Select the desired outlet water hardness (luxury water with approx. 4 °dH), or enter it manually. After entering, the display automatically skips forward.

NOTE



- ▶ Do not set the outlet water hardness too low, as this can lead to increased foaming of soaps (e.g. in the washing machine).
- ▶ When setting the outlet water hardness, ensure that the maximum permissible sodium concentration of 200 mg/l in accordance with the German Drinking Water Ordinance is not exceeded.

8.6 Completing the start-up procedure

Rinsing procedure

A rinsing procedure runs at the end of the start-up procedure. If this procedure is still running, the remaining time is displayed.

- ▶ Wait for the rinsing procedure to end.


Start-up status

The start-up process is complete following the rinsing procedure.

- ▶ Press **CONTINUE**.

9 Connection

During or after start-up, the connection wizard will guide you through the possible types of connection and registration.

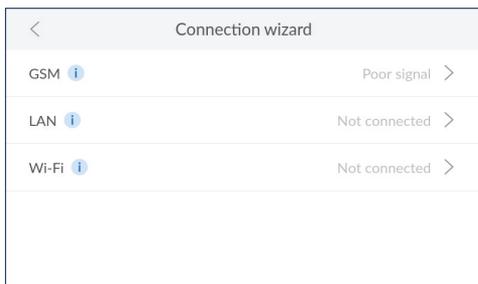

Selecting the connection type

- ▶ Select the connection type used by the product to connect to the Internet.
- ▶ Refer to the related chapter for more information on the selected connection type:
 - [“9.1 GSM – connection wizard”, page 27](#)
 - [“9.2 LAN – connection wizard”, page 28](#)
 - [“9.3 Wi-Fi – connection wizard”, page 30](#)

If you do not want to connect the product to the Internet, press **X** in the header to exit the connection wizard.

9.1 GSM – connection wizard



GSM connectivity is not available for all products.


The product can be connected to the Internet independently of the home network via GSM thanks to an integrated SIM card. This requires a sufficient GSM connection. There are no additional costs.

If necessary, start the connection wizard:

☰ > **Settings** > **General Information** >
☰ **Connection** > **Connection wizard**


▶ Press **GSM**.

▶ Check the connection quality:

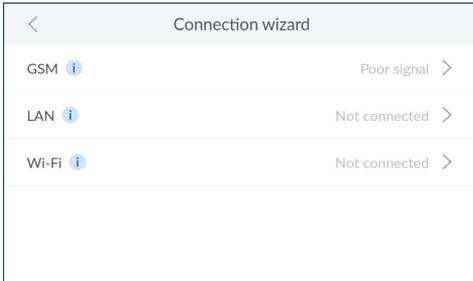

Good GSM connection

▶ Press **CONTINUE** to continue with the registration.

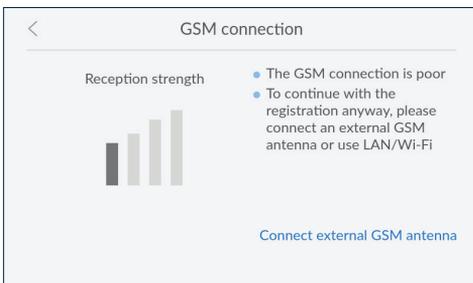

Poor GSM connection

If the GSM connection is poor, you can improve it by using an external GSM antenna.

▶ Contact BWT Customer Service to acquire an external antenna.

▶ Press **CONNECT EXTERNAL GSM ANTENNA** and follow the instructions.

If you do not have a suitable external GSM antenna, you can also establish the connection later or via LAN or Wi-Fi:

▶ Press < to return to the connection wizard and select another type of connection.



Connecting an external GSM antenna

NOTE



- ▶ The external antenna must be initialised via the connection wizard and thus automatically activated. If necessary, run the connection wizard again.
- ▶ Ensure that the technology cover can be easily closed and that the cables do not have any kinks.

- ▶ Open the Easy Fill technology cover of the product.
- ▶ Loosen the screws on the internal cover and then remove it.
- ▶ Route the cable of the external antenna through the opening on the back of the product.
- ▶ Connect the external antenna to the connector on the product (see chapter [“6.3 Electrical connections”, page 19](#)).
- ▶ Attach the internal cover.
- ▶ Close the technology cover so that the cables are not pinched.
- ▶ Press **CONTINUE**.

If the connection quality is still poor, the installation location is outside the range of the GSM.

However, you can also connect the product via LAN or Wi-Fi to continue with registration.

Registration can also be postponed until a later time.


9.2 LAN – connection wizard

If you have a network connection at the installation location of your product, use the RJ45 interface to establish the Internet connection via your network.

If necessary, start the connection wizard:

☰ > **Settings** > **General Information** >
☰ **Connection** > **Connection wizard**

- ▶ Press **LAN**.

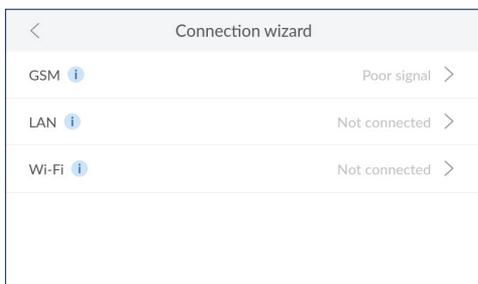




Connecting the network cable

- ▶ Open the Easy Fill technology cover of the product.
- ▶ Connect an Ethernet cable to a network connection near the product.
- ▶ Loosen the screws on the internal cover and then remove it.
- ▶ Route the Ethernet cable through the opening on the back of the product.
- ▶ Connect the Ethernet cable to the connector on the product (see chapter “6.3 Electrical connections”, page 19).
- ▶ Attach the internal cover.
- ▶ Close the technology cover so that the cables are not pinched.
- ▶ Press **CONTINUE**.

NOTE



- ▶ The LAN connection must be initialised via the connection wizard and activated.
- ▶ Ensure that the technology cover can be easily closed and that the cables do not have any kinks.

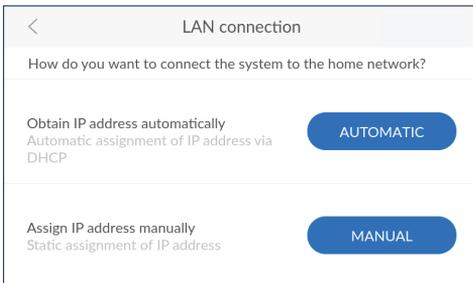


Obtaining the network connections automatically

The network settings can be obtained automatically via DHCP.

- ▶ Press **AUTOMATIC** to use your network settings.

If you do not want to obtain your network settings via DHCP, you can also assign them manually. To do so, you must know your network settings.


- ▶ Press **MANUAL** if you want to assign the settings yourself.

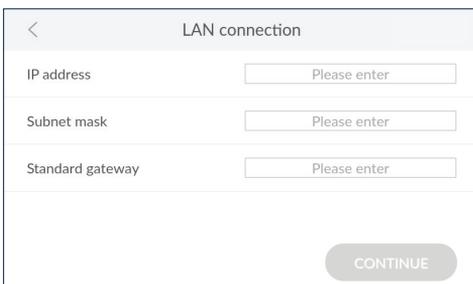

Entering network settings manually

You must know your network settings. If necessary, contact your system administrator.

- ▶ Complete the respective fields by entering the IP address, subnet mask and standard gateway according to your network settings.
- ▶ Press **CONTINUE**.

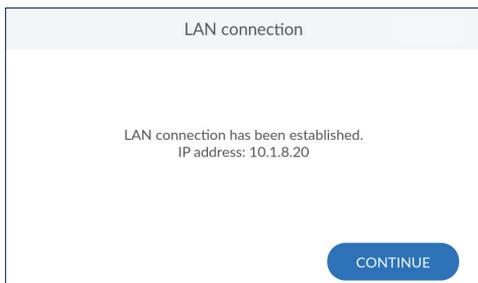

LAN connection was successful

The IP address of the product is displayed if the connection to the home network via LAN was successful.

- ▶ Press **CONTINUE** to continue with the registration (see chapter “10 Registration”, page 35).



LAN connection was unsuccessful


If the connection to the home network via LAN was not successful, you can scan the displayed QR code with an Internet-enabled mobile device to obtain further information.

- ▶ Press **REPEAT** to attempt to connect again.
- ▶ Press **CONTINUE** to exit the connection wizard.

However, you can also connect the product via Wi-Fi or GSM to continue with registration.

9.3 Wi-Fi – connection wizard

To connect the product to the home network via Wi-Fi, you need the name of the Wi-Fi (SSID) and the corresponding password (WPA2 key).

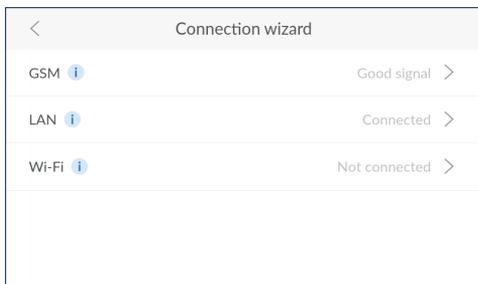

If necessary, start the connection wizard:

≡ > **Settings** > **General Information** >
≡ **Connection** > **Connection wizard**

- ▶ Press **Wi-Fi**.



Starting the Wi-Fi search

- ▶ Press **CONTINUE** to search for available Wi-Fi networks.

If your Wi-Fi router supports WPS, you can use it to establish the connection automatically.




Selecting Wi-Fi

- ▶ Press the desired Wi-Fi network to select it.



Entering the security key

- ▶ Press the open field and then enter the security key (e.g. WPA2 key) of the selected Wi-Fi network.
- ▶ To check the entry afterwards, press the eye symbol next to the input field, to reveal the key.

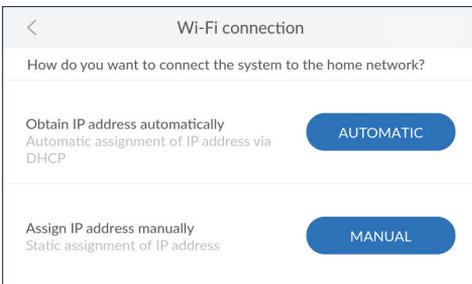


Obtaining the network connections automatically

The network settings can be obtained automatically via DHCP.

- ▶ Press **AUTOMATIC** to use your network settings.

If you do not want to obtain your network settings via DHCP, you can also assign them manually. To do so, you must know your network settings.

- ▶ Press **MANUAL** if you want to assign the settings yourself.

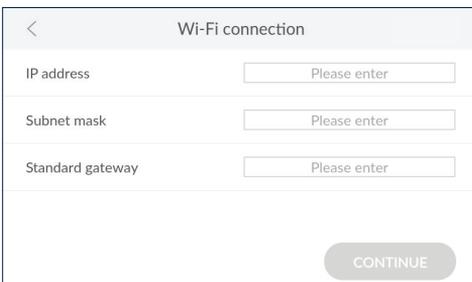

Setting the network settings manually

You must know your network settings. If necessary, contact your system administrator.

- ▶ Complete the respective fields by entering the IP address, subnet mask and standard gateway according to your network settings.
- ▶ Press **CONTINUE**.



Wi-Fi connection was successful

The IP address of the product is displayed if the connection to the home network via Wi-Fi was successful.

- ▶ Press **CONTINUE** to continue with the registration (see chapter [“10 Registration”](#), page 35).



Wi-Fi connection was unsuccessful

If the connection to the home network via Wi-Fi was not successful, you can scan the QR code with an Internet-enabled mobile device to obtain further information.

- ▶ Press **REPEAT** to attempt to connect again.
- ▶ Press **CONTINUE** to exit the connection wizard.

However, you can also connect the product via GSM or LAN to continue with registration.

Registration can also be postponed until a later time.



9.4 Connection

All connections can be activated or deactivated at any time.

- ▶ Open the connection settings:

☰ > **Settings** > **General Information** >
☰ **Connection**

You can start the connection wizard, perform a connection test (ping), activate/deactivate connections or set up a new connection in the **Connection** menu.




9.4.1 Using the connection wizard

If necessary, start the connection wizard:

☰ > **Settings** > **General Information** >
☰ **Connection** > **Connection wizard**

- ▶ Read the related section:

- [“9.1 GSM – connection wizard”](#), page 27
- [“9.2 LAN – connection wizard”](#), page 28
- [“9.3 Wi-Fi – connection wizard”](#), page 30

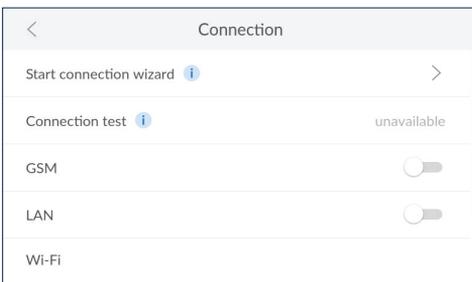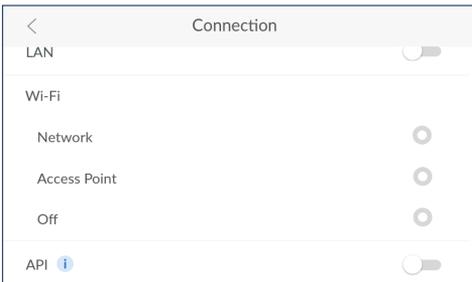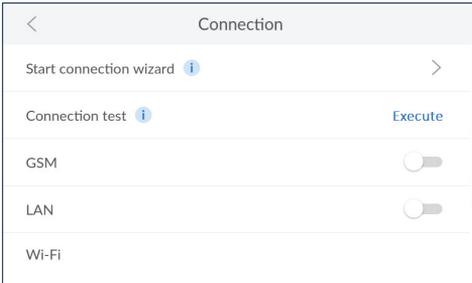

9.4.2 Performing a connection test

The connection test checks the connection of your product to the Internet.

Starting the connection test:

> Settings > General Information > Connection

▶ Press **Execute**.

A checkmark appears once the connection to the Internet is established successfully. If the connection to the Internet fails, an X appears.

Registration is not required for the connection test.

9.4.3 Managing connections

Activating connections

The connection wizard guides you through the menu to set up the desired connection.

The sliding switches can be used to activate/deactivate connections. The sliding switches of activated connections are displayed in Blue.

▶ Press the sliding switch of the connection you want to activate or start the connection wizard. You can find more information in the applicable chapter:

- [“9.1 GSM – connection wizard”, page 27](#)
- [“9.2 LAN – connection wizard”, page 28](#)
- [“9.3 Wi-Fi – connection wizard”, page 30](#)
- [“12.4 API \(Application Programming Interface\)”, page 58](#)

Deactivating connections

Existing connections can be deactivated at any time.

> Settings > General Information > Connection

You can deactivate the connection either by using the sliding switch or by selecting the relevant point. A grey sliding switch or point indicates that the connection is deactivated.

9.5 Checking the connection status

In addition to detailed information about your product, you will find further information about the current status of the product and connections in the **Info** menu.

< Info	
Home	Operating record >
Settings	Serial no. / PNO >
Functions	Consumption >
Help	Connection status >
 Login	Device status >

< Connection status	
Active connection	-
GSM	Good signal
LAN	IP: 10.1.8.20 MAC: 74:e1:4a:31:f8:7f -
Wi-Fi	MAC: c4:93:00:2e:55:ef -

Connection information



▶ Press **Connection status**.


Connection status

Depending on your active connections, the following information is displayed:

- Actively used Internet connection
- GSM signal strength
- IP address and MAC address (LAN)
- IP address and MAC address (Wi-Fi)



If neither LAN nor Wi-Fi is activated, the default IP address is used.

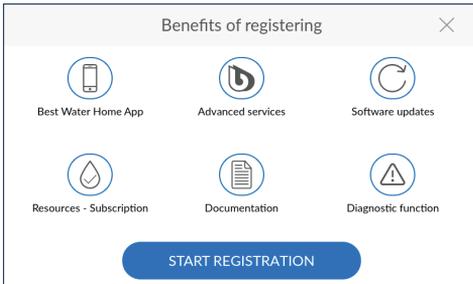


10 Registration

Registering the product enables many additional functions. While these functions have no influence on the hydraulic function of the product, they nevertheless offer great added value.

You can only use all of the manufacturer services if you register your product:

- Using the Best Water Home app
- Advanced services
- Regular software updates
- Using the API interface
- Operating materials subscription
- Documentation
- Diagnostic function

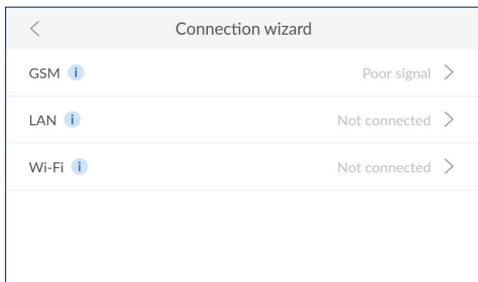

10.1 Starting registration on the product

Subsequent registration

You can begin registration at any time:

 > Settings > Registration

Selecting the connection type

- ▶ Select the connection type used by the product to connect to the Internet.
- ▶ Refer to the related chapter for more information on the selected connection type:
 - [“9.1 GSM – connection wizard”, page 27](#)
 - [“9.2 LAN – connection wizard”, page 28](#)
 - [“9.3 Wi-Fi – connection wizard”, page 30](#)

If you do not want to connect the product to the Internet, press **X** in the header to exit the connection wizard.

Entering the e-mail address

- ▶ Tap inside the text box. A keypad is displayed.
- ▶ Enter your e-mail address.
- ▶ Check the box to confirm that you have read and understood the privacy policy.
- ▶ Press **CONTINUE**.
- ▶ Enter your e-mail address again. Entering it twice eliminates input errors.
- ▶ Press **CONTINUE**.


Entering the postcode

Entering the postcode will automatically determine the water hardness from the **hydromaps** water hardness database for the installation location of your product.

- ▶ Tap inside the text box. A keypad is displayed.
- ▶ Enter the postcode of the installation location of your product and press Enter to confirm your entry.

Selecting the district

- ▶ Select your district if applicable.
- ▶ Press **CONTINUE**.

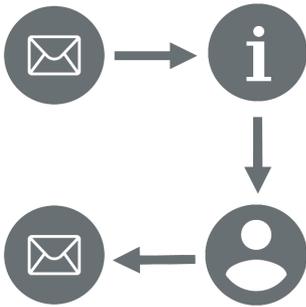

10.2 Completing registration online

Confirming product registration/activation

You will receive an e-mail several minutes after entering your e-mail address.

- ▶ Click or press the **Activate product now** button in the e-mail.

Your web browser opens, where you can finish the registration.

Entering product information

You can specify individual product data, such as the product name and product location.

- ▶ Read and confirm the privacy policy.
- ▶ Provide information about your product.
- ▶ Create a user account.

Creating a BWT user account

You must create a user account to complete product registration. If you already have a user account, you may use it here.

- ▶ Enter your details and create a user account.

Confirmation of successful registration

If registration was completed successfully, you will receive an e-mail with the following information:

- Links for downloading the app
- Login data for remote operation
- Links to customer service and the online shop
- ▶ Make sure that you save this e-mail or print it out.

11 Operation

You can see current data and information as well as make settings in normal operation.

11.1 Home screen



You can see the current status of the product at a glance:

- **Current flow rate:** Current flow rate of outlet water (softened water plus blended water) in litres per hour. The product output is displayed as a percentage below this.
- **Regenerative:** Fill level information as a percentage or days remaining until the regenerative in the container is depleted. The regenerative level is measured via ultrasound.

- **Flow volume:** Flow volume of fully softened water (soft water) in litres.

▶ Select < or > to switch between daily, monthly and annual consumption.

▶ Press the number of litres under **Flow volume** to open a graphic display of the flow volume.

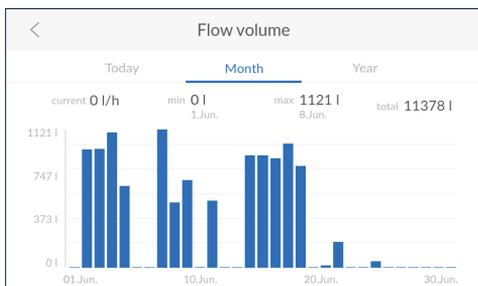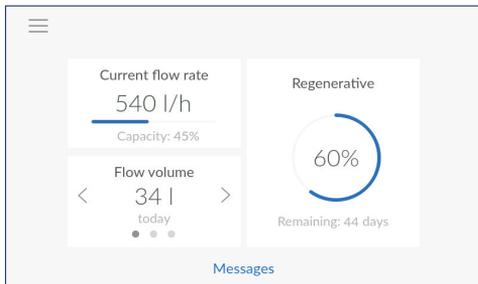



	Information
	Warning
	Fault

11.2 Messages

- Press **Messages** on the home screen to display current product messages.



If a message is confirmed without fixing the cause, this message appears again after the next regeneration at the latest.

Messages are divided into three categories:

- **Information** indicates events.
Example: **Column regenerated**
- **Warning** indicates required actions.
Example: **Refill the regenerative**
- **Fault** indicates mechanical, hydraulic or electronic problems.
Example: **AQA Guard Wireless Sensor triggered**

- Fix the causes of warning and fault messages, and then acknowledge the messages on the display.

All messages are saved and can be viewed in the operating record:

> **Info** > **Operating record**

11.3 Menu overview


The menu overview opens with the button from the home screen.


- Open the menu overview:

Home >

The menu overview is the starting point for all other menus:

- **Home**: Current state of the product (see chapter "[11.1 Home screen](#)", page 38).
- **Settings**: Settings, external modules and registration (see chapter "[11.4 Settings](#)", page 40).
- **Functions**: Trigger actions (see chapter "[11.5 Functions](#)", page 44).
- **Info**: Operating record, product information and device status (see chapter "[11.6 Info](#)", page 50).
- **Help**: Contact persons and FAQs (see chapter "[11.7 Help](#)", page 54).
- **Login**: Login for service technicians.

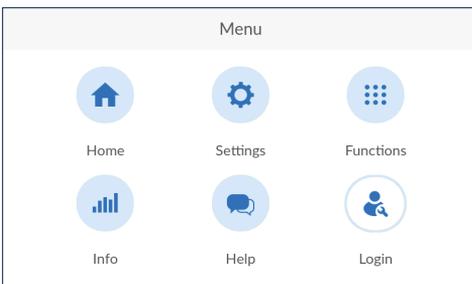

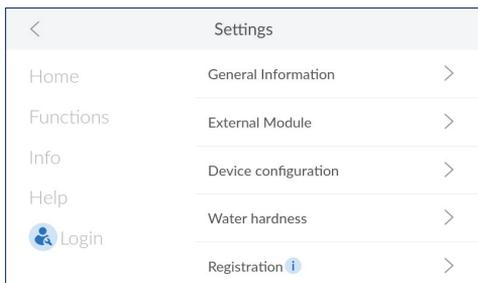

11.4 Settings

The **SETTINGS** menu provides access to the following options:


- **General Information:** Basic settings such as time, language, function times and connections
- **External Module:** Connection of additional external filters and modules
- **Device configuration:** Optional settings such as AQA Watch, Rinse or acoustic alarm
- **Water hardness:** Setting of inflow and outlet water hardness and unit for measuring the water hardness
- **Registration:** Online product registration



11.4.1 General Information


You can set the date, time, language, function times, connection and screen saver in the **GENERAL INFORMATION** menu.

- ▶ Press > for the menu item in which you wish to change the settings.
- ▶ Press < or > to make the desired settings.
- ▶ Follow the instructions on the display.

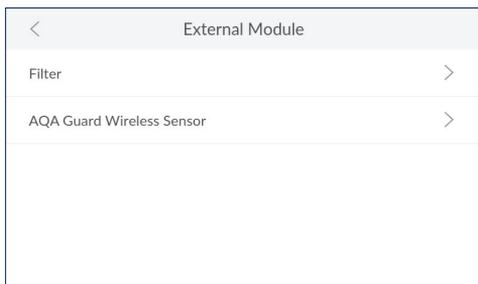

11.4.2 External modules

- ▶ Press > for the menu item in which you wish to change the settings.

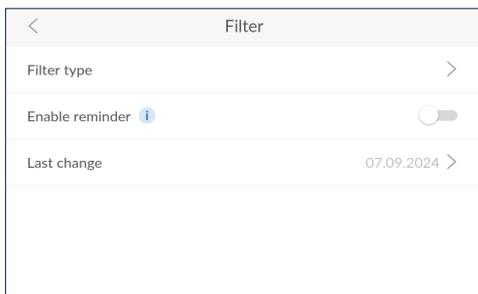

Filter

If you have a connected external filter, select the type here and set whether you want to be notified as soon as it needs to be flushed or replaced.

The filter reminder can be synchronised with the filter by storing the last filter replacement date in the **FILTER** menu in the control. If no date is selected, the first softening unit startup date is selected by default.

AQA Guard Wireless Sensor		
Sensor 1	<input type="text" value="Please enter"/>	teach-in
Sensor 2	<input type="text" value="Please enter"/>	teach-in
Sensor 3	<input type="text" value="Please enter"/>	teach-in
Sensor 4	<input type="text" value="Please enter"/>	teach-in
Sensor 5	<input type="text" value="Please enter"/>	teach-in

Teaching-in the AQA Guard Wireless Sensor

- ▶ Select a sensor and press **Please enter**.
- ▶ Enter a name for the sensor.
- ▶ Press **teach-in**.
- ▶ Pull the red test switch on the back of the sensor three times and wait for the confirmation. The teach-in process for the sensor is complete. If a sensor is triggered, the name of the relevant sensor is shown in the message.

Removing the AQA Guard Wireless Sensor

- ▶ Select the sensor to remove and press **Remove**. The connection to the sensor is deleted.

Device configuration		
AQA Stop Sensor i		<input checked="" type="checkbox"/>
AQA Stop volume i	9999 l	<input checked="" type="checkbox"/>
AQA Watch i		<input checked="" type="checkbox"/>
AQA max. flow i	20000 l/h	<input type="checkbox"/>
Rinse i		<input type="checkbox"/>

11.4.3 Device configuration

Depending on your product and the installed software, additional device settings are possible. Activate/deactivate these settings as required.

- ▶ Press the checkbox(es) to activate or deactivate functions.
- ▶ Press the number to change the value.
- ▶ If necessary, swipe your finger upwards from the bottom of the display to scroll through the list.

AQA Stop Sensor

If the product's floor sensor detects water on the floor, the water supply in the direction of flow is shut off downstream from the product and a warning is issued. The floor sensor only responds to drinking water (minimum conductivity of 500 $\mu\text{S}/\text{cm}$).

- ▶ Fix the cause of moisture on the floor.
- ▶ Dry the floor and the sensor.
- ▶ Acknowledge the message (see chapter "[11.2 Messages](#)", page 39).

AQA Volume

The water volume monitor will trigger if too much softened water flows into the unit. If the maximum level is exceeded, the water supply system in the direction of flow is shut off downstream of the product. A sensible maximum level must be chosen for the unit to function correctly. The set quantity must be lower than the maximum capacity of the system in litres.

AQA Watch

Consistently low flow rates indicate problems in the pipeline network. The **AQA WATCH** function monitors the domestic water network for low flow rates (< 60 l/h) and issues a warning as soon as they persist for more than 10 minutes.

AQA Max Flow

The water volume monitor will trigger if too much softened water flows into the unit over a short period of time. If the maximum level is exceeded, the water supply system in the direction of flow is shut off downstream of the product. A sensible maximum level must be chosen for the unit to function correctly. The set quantity must be lower than the maximum capacity of the system in litres.

Rinse

The rinse function is an additional rinsing procedure that is recommended for operation with subsequent reverse osmosis (e.g. during operation of a steam generator).

- ▶ Activate this function during operation of the related products.

Hygiene

The hygiene function triggers the rinsing of the softening columns if no water has been tapped for a period of 24 hours.



Rinsing is performed during re-generation if the hygiene function is activated and the remaining capacity is between 100% and the set regeneration trigger capacity (default: 75%).

Acoustic alarm

In case of a fault, an audible alarm sounds.

- ▶ Deactivate this function if you do not need it (e.g. because the product is out of earshot).

Device configuration	
AQA Watch i	<input checked="" type="checkbox"/>
AQA max. flow i	20000 l/h <input type="checkbox"/>
Rinse i	<input type="checkbox"/>
Hygiene i	<input type="checkbox"/>
Audible alarm	<input type="checkbox"/>

11.4.4 Setting the water hardness

For registered products, the inflow water hardness is taken from the **hydromaps** water hardness database (if available). Check that the database value matches the water hardness at the installation location and adjust the value for the inflow water hardness if necessary.

- ▶ If necessary, press **ENTER VALUE MANUALLY**.
- ▶ Enter the water hardness at the installation location.

NOTE



- ▶ The water hardness cannot be changed during regeneration.
- ▶ Do not set the outlet water hardness too low, as this can lead to increased foaming of soaps (e.g. in the washing machine).
- ▶ When setting the outlet water hardness, ensure that the maximum permissible sodium concentration of 200 mg/l in accordance with the German Drinking Water Ordinance is not exceeded.

- ▶ Select the desired outlet water hardness (luxury water with approx. 4 °dH), or enter it manually.
- ▶ Follow the instructions on the display.

To finely adjust the desired water hardness, proceed as follows:


- ▶ Press **FINE ADJUSTMENT**.

Setting motor blending

If the outlet water hardness deviates, it can be finely adjusted in the "Set motorized blending" screen.

The impulse value within the gear wheel corresponds to fully opened blending. The value below the gear wheel reflects the current position of blending.

- ▶ After adjusting your setting, press **SAVE**

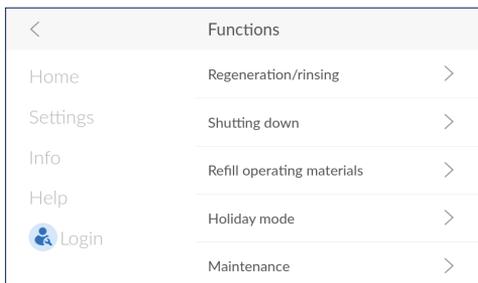

11.4.5 Registration

To be able to use all the additional functions, you must register your product (see chapter “[10 Registration](#)”, page 35).

11.5 Functions

The **FUNCTIONS** menu provides access to the following options:

- **Regeneration/rinsing**: Manually trigger regeneration or rinsing (e.g. after a holiday).
- **Shut down / Return to operation**: Shut down the product correctly.
- **Refill operating materials**: Confirm the refilling of regenerative.
- **Holiday mode**: Switch the product to standby mode for a defined period of time to save resources and prevent damage.
- **Maintenance**: Product check and maintenance routine with the **BWT IOCLEAN** cleaning tablet.


11.5.1 Regeneration/rinsing

You can trigger manual regeneration or rinsing at any time while the product is in operation.

- ▶ Press **Regeneration/rinsing** >.
- ▶ Select whether you want to trigger an additional regeneration or additional rinse.
- ▶ Press **Execute** to start the regeneration or rinse.



Note that once regeneration or rinsing has been started it takes a certain amount of time and must not be interrupted.

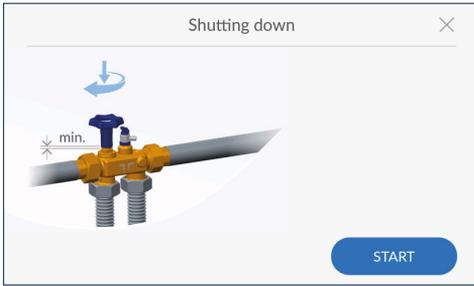

11.5.2 Shut down/return to operation

If you do not need the product for a longer period of time (e.g. you are away), you should shut it down.

While the product is in operation, the menu entry is called **Shutting down**. When the product is taken out of operation, the menu entry is called **Return to operation**.

Shutting down

- ▶ Press **Shutting down** >.
- ▶ Close the connection fitting.
- ▶ Press **Start**.

A valve on the product is opened and pressure is released.



Return to operation

- ▶ Press **Return to operation** >.
- ▶ Open the connection fitting.
- ▶ Press **Start**.

A valve on the product is closed and the pressure required for operation is generated.



11.5.3 Refilling operating materials

NOTE



- ▶ When filling the regenerative, make sure that impurities do not get into the regenerative container or locking system (red circle).
- ▶ If necessary, clean the outside of the regenerative pack in advance.
- ▶ If there are impurities in the regenerative container, clean it with drinking water.
- ▶ Overfilling past the 100% mark can result in implausible fill level values being reported. Remove regenerative in case of overfilling.
- ▶ The product must not be operated with Sanitabs or Sanisal.



>Functions > Refill operating materials

The regenerative must be refilled on a regular basis. The product monitors the regenerative supply with a sensor and reports a shortfall via the display. All commonly available regeneratives that comply with DIN EN 973 type A, can be used.

- ▶ Reach into the recesses on the left and right sides of the Easy Fill technology cover and then pull it up slightly.
- ▶ Refill regenerative into the regenerative container. The maximum level of 100% on the display corresponds to a filling level of approx. 46 cm.

Caution: Do not fill with water!

- ▶ Press the Easy Fill technology cover down gently until it shuts.


If the regenerative has been refilled, you must confirm this to trigger the ultrasonic measurement.

Either:

- ▶ Go to the **Regenerative refilling** menu item and press **CONFIRM**.

Or:

- ▶ Go to the **Messages** menu item and press **REFILL**. The device status display starts flashing to indicate that the regenerative level is being measured (see chapter "7.2 Device status display", page 20).

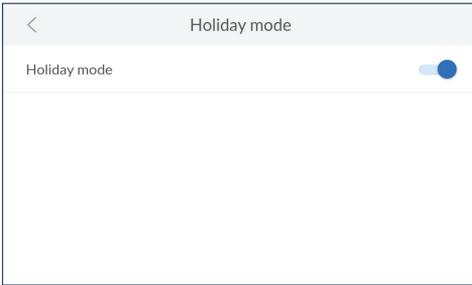

11.5.4 Holiday mode

If you do not need the product for a certain amount of time (e.g. during holidays, etc.), switch it to Holiday mode. Holiday mode is a standby mode that conserves resources and reduces the risk of water damage:

- Regeneration does not take place, which saves water and regenerative.

Activating Holiday mode

☰ > Functions > Holiday mode

- ▶ Press the sliding switch to activate Holiday mode.




You can activate Holiday mode on the product or via the app. However, you can only deactivate it on the product.

If you have already gone on holiday and forgotten to activate Holiday mode, use the BWT Best Water Home app or remote operation to switch on Holiday mode.

Deactivating Holiday mode


☰ > Functions > Holiday mode

- ▶ Press the sliding switch to deactivate Holiday mode.

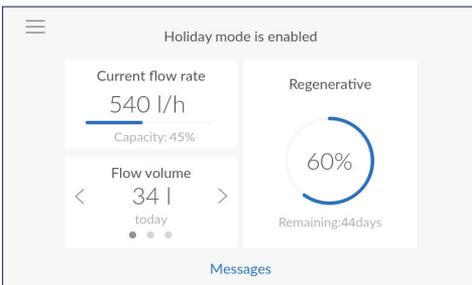

You can also deactivate holiday mode from the home screen:

- ▶ Press “Holiday mode is enabled” in the upper area of the home screen.
- ▶ Confirm the end of holiday mode.

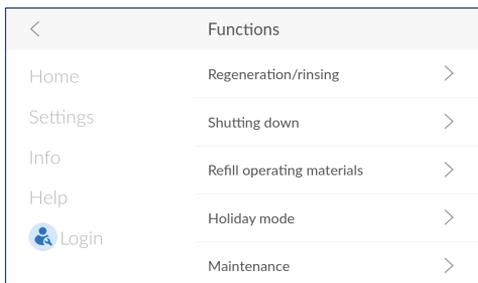

11.5.5 Maintenance


The product is equipped with a maintenance function that must be activated twice a year. You will be guided via the display in checking the basic functions.

☰ > Functions > Maintenance




No maintenance can be performed during the regeneration procedure.

If necessary, wait until regeneration is complete.

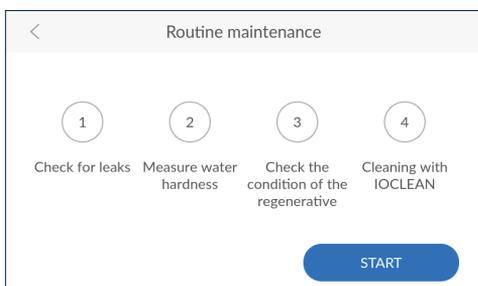

▶ Press **START**.

You will be guided step-by-step through the maintenance procedure.

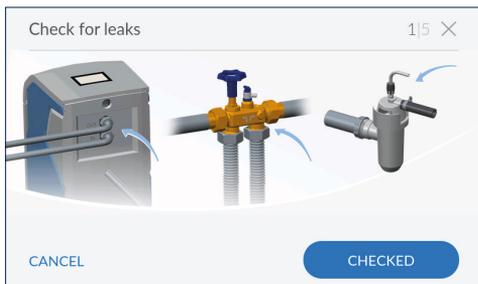

Checking for leaks

In this step, check the product for leaks.


▶ Check the product as well as the connections both in front of it and behind it for leaks.



Pay particular attention to water leakage at the screw connections (arrows in the picture).

If you did not find any leaks:

▶ Press **CHECKED**.

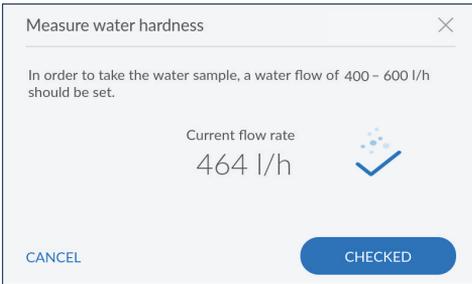

Measuring water hardness

To determine the water hardness, take a water sample at the nearest sampling point at a flow rate of 400 to 600 l/h.

▶ Press **CHECKED**.

▶ Check the outlet water hardness, for example, with the enclosed luxury water check.




Follow the usage instructions enclosed with the luxury water check.

If the water hardness is acceptable:

▶ Press **CHECKED**.

If the water hardness is not acceptable:

Press **CANCEL**, readjust the motor blending and repeat the water hardness test (see section [“Setting the water hardness” on page 43](#) and [“Setting motor blending” on page 43](#)).


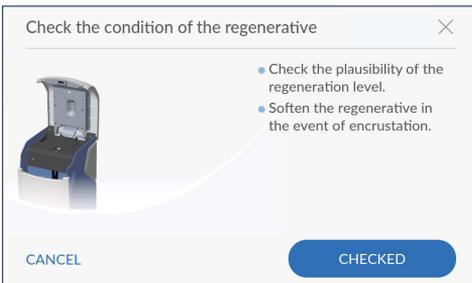


Check the condition of the regenerative

▶ Check that the regenerative fill level is plausible.

To do so, compare the actual regenerative fill level with the regenerative level shown on the display.

▶ Check the regenerative for encrustation. If present, loosen the encrustation.

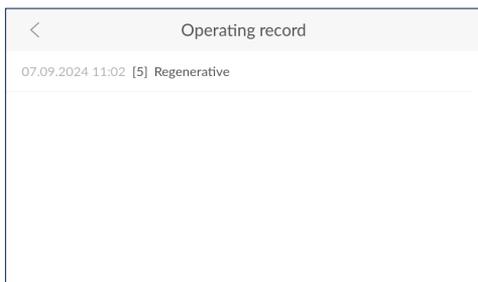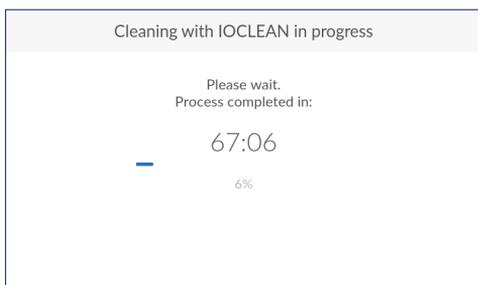

Cleaning

Cleaning is the last step in the biannual maintenance of your product. Only use the **BWT IOCLEAN** cleaning tablets for this.

- ▶ Open the Easy Fill technology cover of the product.
- ▶ Take a cleaning tablet out of the packaging and insert it into the opening provided on the product (see the adjacent image).
- ▶ Close the Easy Fill technology cover on the product.
- ▶ Press **PERFORMED**.

Cleaning starts and the remaining time until the end of the rinsing procedure is displayed.



During cleaning, no settings can be made on the product. Wait until regeneration is complete.

The Home screen is displayed once the cleaning process is complete.

11.6 Info

The **INFO** menu provides access to the following options:

- **Operating record:** Documentation of all messages and events
- **Serial no. / PNO:** Product-specific information
- **Consumption:** Information about water and regenerative consumption
- **Connection status:** Information about the type and quality of existing connections
- **Device status:** Information about softened water capacity and regeneration progress

11.6.1 Operating record

☰ > Info > Operating record

You can view all events in the operating record, such as power failures, regenerations and other errors, with the date, time and frequency.

- ▶ If necessary, swipe your finger upwards from the bottom of the display to scroll through the list.
- ▶ Press > next to an entry for more details.

Serial no. / PNO	
Serial number	SCH092022210626/6-500191
Start-up data	07.09.2024 11:05
Product Code	DZP3-DN52
BWT Connect	2.0212
PCB 1.0	2. 2. 3

Serial no. / PNO	
Product Code	DZP3-DN52
BWT Connect	2.0212
PCB 1.0	2. 2. 3
PCB 1.1	2. 2. 3
System	BWT Perla

11.6.2 Serial no. / PNO

 > Info > Serial no. / PNO

You require the product-specific information to enable customer service to quickly check how up-to-date your product and the installed product software are, if necessary.

- **Serial number:** Individual serial number
 - **Start-up data:** Time of start-up
 - **Product Code:** Individual product code
 - **BWT Connect:** Version of the installed product software
 - **PCB:** Printed circuit board installed in the product
 - **Unit:** Product designation
- ▶ If necessary, swipe your finger upwards from the bottom of the display to scroll through the list.




Make note of this data on the inside cover of this manual so that it is quickly accessible in case service is required.

Consumption	
Flow volume	>
Regenerative	>
Water consumption	>

11.6.3 Consumption

☰ > Info > Consumption

▶ Press > for detailed information about the flow volume, regenerative or water consumption.

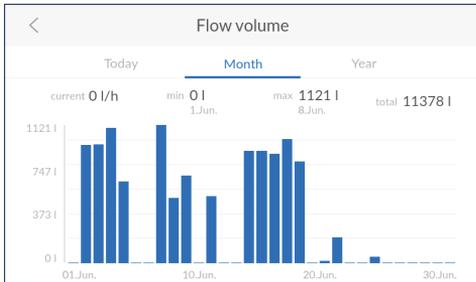

Flow volume

Information about the current water flow.

▶ Press TODAY, MONTH or YEAR to view the flow volume in the respective time period.

NOTE



▶ A maximum flow rate that is too low indicates a problem in the pipe system.

Regenerative	
Since 07.09.2024 (Start-up)	25.1 kg
Since 07.09.2024 (Maintenance)	25.1 kg
Since refill	0.0 kg
Regenerations since start-up	0
Regenerations since maintenance	0

Regenerative

Information about current regenerative consumption.

▶ If necessary, swipe your finger upwards from the bottom of the display to scroll through the list.

Water consumption	
Saturday	55 l
September	55 l
2024	0.0 m ³
Since 07.09.2024 (Start-up)	0.0 m ³
Since 07.09.2024 (Maintenance)	0.0 m ³

Water consumption

Information about current water consumption.

▶ If necessary, swipe your finger upwards from the bottom of the display to scroll through the list.

Connection status	
Active connection	-
GSM	Good signal
LAN	IP: 10.1.8.20 MAC: 74:e1:4a:31:f8:7f
Wi-Fi	MAC: c4:93:00:2e:55:ef

Device status	
Remaining capacity	
Tank 1	307 l
Tank 2	307 l
Regeneration step	
Tank 1	Operation
Tank 2	Operation
Regeneration time remaining	
Tank 1	00:00:00

Device status	
Regeneration time remaining	
Tank 1	00:00:00
Tank 2	00:00:00
Brine meter – Current suction rate	
	0 ml/s
Next maintenance	
Maintenance	07.03.2025 / ↻ 730
Professional maintenance	07.09.2026

11.6.4 Connection status

 > Info > Connection status


In addition to displaying the connection currently being used, you can also view information about the quality, status, IP addresses and MAC addresses of all the connection types.

11.6.5 Device status

 > Info > Device status

Information about the remaining soft water capacity, the current regeneration step, the remaining regeneration time, the current brine meter suction rate and the time of the next maintenance.

► Swipe your finger upwards from the bottom of the display to scroll through the list.

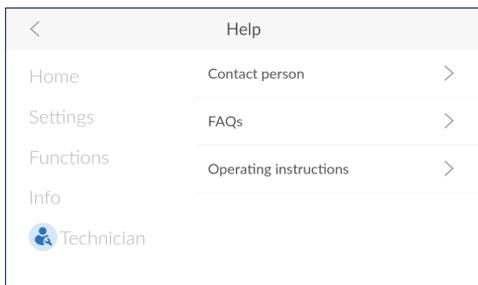

11.7 Help

The **HELP** menu provides access to the following options:

- **Contact person**: Information about the installation specialist and service
- **FAQs**: QR code for the Internet page with answers to frequently asked questions
- **Operating manual**: QR code for the webpage with the latest operating instructions

11.7.1 Contact person

Enter the customer service contact information here so you do not have to search for it if errors occur.

- ▶ Type into the individual text fields and enter the respective contact data.




11.7.2 FAQs

FAQs are answered and published on the BWT website.

- ▶ Use the QR scanner on your mobile device to open the FAQs page.



All questions and answers can also be found on the related product page at www.bwt.com.

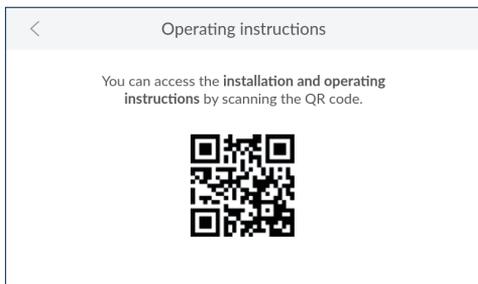

11.7.3 Installation and operating instructions

You can find product-related documents such as the installation and operating instructions on the BWT website.

- ▶ Use the QR scanner on your mobile device to open the page for the product-related documents.

12 Additional functions

Registering your product allows you to use various additional functions. For an overview of the benefits of registering, see chapter [“10 Registration”](#), page 35.



12.1 BWT Best Water Home app

The BWT Best Water Home app offers a clear overview of your products.

Features of the BWT Best Water Home app

- Monitoring the regenerative level
- Service information
- Holiday mode
- Warning and fault messages
- Using the API interface
- Direct communication with your BWT drinking water specialist
- Regular newsletters and promotions relating to your BWT products are available on request



The product data is not displayed in real time.


Installing the BWT Best Water Home app

- ▶ Open the **Apple App Store** or **Google Play Store** on your mobile device.
- ▶ Search for **BWT Best Water Home**.
- ▶ Install and open the **BWT Best Water Home app**.
- ▶ Select **ADD BWT PERLA** and log in with your BWT user account (e-mail address and password).



You can only be logged in with one account. Always use the same account to activate all your BWT products.

Your BWT product is now connected to the **BWT Best Water Home** app and can be used.

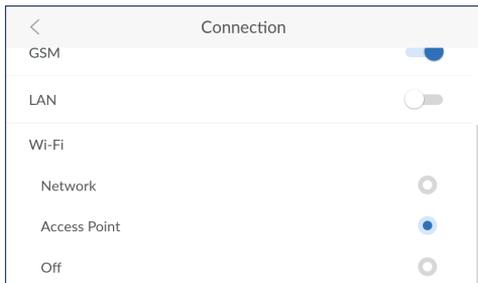

12.2 Remote operation of the product via a direct Wi-Fi connection (access point)

Activate this function to operate your product via a direct Wi-Fi connection (access point) on a device.

► Open the connection settings:

☰ > **Settings** > **General**
☰ > **Information** > **Connection**

► Press **ACCESS POINT**.

Wi-Fi with the **BWTAP** SSID is displayed.

► Enter the WPA2 key that you received via e-mail when you registered the product.

Establishing a direct Wi-Fi connection



A direct Wi-Fi connection (access point) is only possible within a close vicinity to the product.

Note the WPA2 key and login code from the e-mail you received when registering your product.

► Activate the **ACCESS POINT** function on the product.

► Search for Wi-Fi with the **BWTAP** SSID on your device.

► Enter the WPA2 key received via e-mail.

► Open a web browser on the device.

► Enter the IP address of the product into the address bar in the browser. You can find this information here:

☰ > **Info** > **Connection status**



Check the IP address: The default IP address is 192.168.110.1; you may need to check the product to see if a different IP address is being used (Info > Connection status menu).

A connection to the product is established.

► Enter the login code that you received during registration via e-mail.

► Operate your product via the direct Wi-Fi connection in the same way as you would via the display on the product.

12.3 Remote operation of the product via the home network (LAN / Wi-Fi)

You can operate the product remotely if it is connected to the home network via LAN or Wi-Fi.

NOTE



- ▶ While operating the product via remote connection, you must not change this connection, otherwise access is no longer possible.
- ▶ The product and device must be in the same network.
- ▶ To enable data transfer, the following port must be open on your router: TLS / SSL port 443

Requirements

- The product was successfully registered.
- The login code you received after registration is available.
- The connection via LAN or Wi-Fi is active and working.
- ▶ Open a web browser on a device connected to the network.
- ▶ Enter the IP address of the product into the address bar in the browser. You can find this information here:



> Info > Connection status

- ▶ Confirm your entry.
- ▶ Enter the login code received via e-mail to establish the connection.


A connection to the product is established.

- ▶ Operate your product via the remote connection in the same way as you would via the display on the product.

NOTE



- ▶ While operating the product via remote connection, you must not change this connection, otherwise access is no longer possible.
- ▶ Holiday mode can only be activated via remote connection, not deactivated.

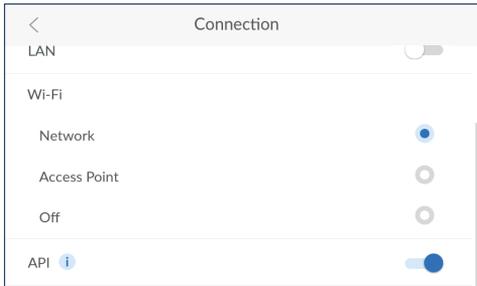

12.4 API (Application Programming Interface)

The API lets you query data directly from the product and integrate it into a smart home system.

An interface description is provided for more information in the download area of the BWT homepage.

To use the API interface, you must activate the API in the menu **Settings > General Information > Connection**.

13 Operator responsibilities

You have purchased a product that is durable and easy to service. However, certain duties must be carried out. Flawless function requires:

- Operation as intended
- Regular checks and servicing

Check the quality and pressure conditions of the inflow water regularly with your water supplier. If the water quality changes, the settings may need to be changed. Consult a specialist in this case.

To ensure the proper function and safety of the product, regular inspections must be carried out by the operator and routine maintenance must be performed every six months (see EN 806-5).

The replacement of wearing parts within the prescribed intervals is also required for the warranty and proper functioning of the unit.

13.1 Intended operation

The intended operation of the product includes commissioning, operation, decommissioning and, if necessary, recommissioning. Intended operation of the product and drinking water installation requires regular checks, servicing and operation (water flows through the product) in accordance with the operating conditions for design and construction, including simulated sampling (manual or automated flushing), where appropriate. If simulated sampling is not possible, the product must be taken out of service.

13.2 Checks

(by the operator)

BWT recommends that the operator regularly carry out the following checks and record the results:

- Water quality: Depending on the product, inflow water values and set outlet water values may need to be corrected.
- Water pressure: If the pressure conditions change, the product settings may also have to be changed.
- Operating condition of the product.
- Check whether messages have been issued.
- Leak-tightness of the product and installation.

13.3 Inspection

Performing the inspection is obligatory for you as an operator if you use your outlet water as described in category 1 (see table).

Use of outlet water	Category	Inspection in accordance with EN 806-5	Maintenance in accordance with EN 806-5
Direct or indirect, targeted supply of drinking water in the context of a rental or other independent, regular activity carried out with the intention of making a profit.	1	Obligatory	Implementation by specialist only Obligatory
Supply of drinking water for an undetermined, changing group of people not connected by personal relationships.	1	Obligatory	Implementation by specialist only Obligatory
No direct or indirect, targeted supply of drinking water in the context of a rental or other independent, regular activity carried out with the intention of making a profit.	2	Not obligatory	Implementation by specialist or operator Not obligatory
No supply of drinking water for an undetermined, changing group of people not connected by personal relationships.	2	Not obligatory	Implementation by specialist or operator Not obligatory

13.3.1 Inspection tasks

The scope of required inspection tasks is more limited if your product is registered with BWT and you use the available options (see table):

- BWT Best Water Home app
- Download, check and archive product documentation from the app

This is the only way to directly identify and take the necessary actions or directly identify and deal with mechanical/hydraulic/electrical problems.

Inspection task	Interval	Instruction for products WITHOUT online registration	Instruction for products WITH online registration
Check/refill regenerative	According to use	Required	Required
Check brine containers for soiling	Every 2 months	Required	Required
Check for leaks, visual inspection	Every 2 months	Required	Required
Functional test/control unit display	Every 2 months	Required	Not required
Test regenerative consumption depending on the treated water	Every 2 months	Required	Not required
Check the setting of the regeneration waste water system	Every 2 months	Required	Required
Check the counting function of the water meter	Every 2 months	Required	Not required
Test the regeneration process	Every 2 months	Required	Not required
Clean the brine container and the internal surfaces that come into contact with water	Every 6 months	Required	Required

13.4 Maintenance in accordance with EN 806-5

(carried out by BWT after-sales service or an authorised technician in accordance with EN 806-5)

The product must be maintained by a qualified specialist if you are using your outlet water as defined in category 1; see the table in section “[Inspection](#)” on page 60.

In addition to all inspection activities, maintenance work on the assemblies listed below must be performed regularly by BWT customer service or a trained specialist. A detailed maintenance manual can be requested from the qualified fitter at BWT. We recommend that you enter into a maintenance agreement with BWT customer service or your fitter.

Depending on the type and design of the BWT product, the following assemblies are provided and must be cleaned and maintained:
Entire hydraulic unit
Red/green injector
Electrolysis cell
Locking pin
Waste water elbow
Internal hoses
Blending
Water meter cover
Paddle-wheel
Guide baffle
Check valve
Bypass valve
Filler plug
Brine meter
Brine meter solenoid valve
AQA Stop floor sensor

13.5 Replacement of parts

The operator must ensure that parts that are subject to wear and ageing during the life of the product are replaced by a qualified fitter.

Details of the replacement cycles can be found in the maintenance manual from BWT.

13.6 BWT expert maintenance

Regardless of how the outlet water is used, the manufacturer recommends having expert maintenance performed at least every 24 months.

13.7 Stoppages and re-activating the unit

In case of expected stagnation phases, take the following preventive measures:	BWT recommendations for restarting a unit after stagnation phases:
Fewer than 3 days: None	Trigger regeneration via the Functions menu. Then open all taps to rinse the system.
3 to 30 days: Use the controller to put the product in Holiday mode. For information about activating Holiday mode, see chapter " Holiday mode " on page 47.	For information about deactivating Holiday mode, see chapter " Holiday mode " on page 47.
1 to 6 months: Close the connection fitting and shut down the product via the controller. Then remove the mains plug.	Open the main shut-off valve and connection fitting. Have BWT customer service perform regeneration using Dioxal. Then open all taps to rinse the system.
Longer than 6 months: Disconnect the building's water system from the municipal water system. Disconnect the product from the water supply system (close the connection fitting) and shut down the unit.	Reconnect the unit to the municipal drinking water system. Have BWT customer service perform regeneration using Dioxal.

14 Troubleshooting

14.1 Fault during start-up

Fault	Possible source of the fault	Steps to resolve the fault
1 Fault when activating the product	1.1 Were all mandatory fields completed?	If all fields are complete and the e-mail address has been entered correctly, follow step 1.2.
	1.2 Is the product connected to the Internet?	Check the internet connection of the product. If no GSM connection is established, follow the steps to connect the product to the home network (see chapter “9.2 LAN – connection wizard” , page 28 or “9.3 Wi-Fi – connection wizard” , page 30). If a connection is established, follow step 1.3.
	1.3 Is there a success report in the message overview?	Check for the following message in the displayed messages (Home > Messages menu): Registration successful – check incoming e-mail . If you do not find this message, start the activation process again. If you find the message, follow step 2.1.
2 Fault when delivering the activation message	2.1 Has sufficient time passed?	Activation of your product may take up to an hour. If after this period you have not received an activation e-mail to the address you have provided, follow step 2.2.
	2.2 Is the e-mail address correct?	Check that the e-mail address you entered on the product is correct and amend it if necessary. If the e-mail address is correct, follow step 2.3. If an incorrect e-mail address was entered during the initial entry, start the registration process again.
	2.3 Is the e-mail in a spam folder?	Check the spam/junk mail folder of the e-mail address provided. If you cannot find an activation e-mail there, start the activation process again.
	2.4 Have you carried out the activation again?	If you have already carried out the activation again, but the problem persists, please contact the BWT service hotline (after-sales service). Keep the product code handy for this (Info > Serial no. / PNO menu).
	2.5 Software version out of date?	Have the software version checked by customer service and update the software if necessary.
3 Fault during on-line activation	3.1 Website does not open when you click on the activation link.	Check the Internet connection of the product on which you wish to open the link. Online activation can only be performed when the Internet connection is active.
	3.2 Website opens with a service message (maintenance).	Occasionally, maintenance of the systems must be performed. During these periods, activation is not possible. Try again after the specified maintenance period.

	3.3 Website opens with a fault message (service request not available (any longer)).	To guarantee security, activation links have an expiration date. This date was exceeded. Restart product activation.
	3.4 User account creation not possible (maintenance message).	Occasionally, maintenance of the systems must be performed. During these periods, activation is not possible. Try again after the specified maintenance period.
	3.5 User account creation not possible (fault message – input).	Check that the entries in the mandatory fields are correct.
	3.6 User login not possible (maintenance message).	Occasionally, maintenance of the systems must be performed. During these periods, activation is not possible. Try again after the specified maintenance period.
	3.7 User login not possible (fault message).	Check the e-mail address and password for accuracy. Make sure the Caps Lock key on your keyboard is not activated. Also check the language of the keyboard you are using and make sure that this matches your desired input language.
	3.8 User login not possible (forgotten password).	Click Forgotten password and follow the process to set a new password.
	3.9 It is not possible to complete the activation (input fields incomplete).	Check the input fields. All mandatory fields must be filled with correct values.
	3.10 Complete the activation (consent to data protection agreement).	Read the data protection agreement carefully and confirm your agreement. Use of digital services is only possible with consent.
4 Fault after successful start-up	4.1 Product does not yet show in the Settings > Registration menu that the registration was successful even though the activation process was successful. (E-mail confirmation of successful activation received)	It can take up to an hour for the product to successfully activate. If this period has already expired, contact the service hotline (after-sales service).

14.2 Fault during operation

Fault	Cause	Remedy
Low regenerative indicator is shown.	Insufficient regenerative in the regenerative container (3).	Refill the regenerative (see chapter “11.5.3 Refilling operating materials” , page 46).
	If there is still regenerative in the container, regenerative encrustation may have formed under the ultrasound sensor.	Loosen and stir the regenerative.
The product is not supplying softened water.	No regenerative in the regenerative container (3).	Refill the regenerative (see chapter “11.5.3 Refilling operating materials” , page 46). Manually initiate regeneration for both softening columns, one at a time.
	Power supply interrupted.	Establish electrical connection.
	Blending not set correctly.	Set blending (see section “Setting the water hardness” on page 43).
	A cavity prevents enough brine from being formed (“salt bridge”).	Ensure that the regenerative is filled evenly without cavities. If the regenerative level is low, “stir” the regenerative with a suitable object.
The product supplies deviating outlet water hardness.	The product has not been finely adjusted.	The outlet water hardness still has to be finely adjusted.
	Water hardness of the inflow water has changed.	Adjust the water hardness of the inflow water.
The product is not supplying softened water or the flow is insufficient.	Inlet pressure is too low.	Increase inlet pressure (set pressure reducer if necessary) and start manual regeneration.
Coloured rinsing water at start-up.	Abrasion particles from ion exchange material are flushed out.	Start-up repeat rinsing (see section “Rinsing procedure” on page 25).
An implausible regenerative level is displayed.	The regenerative container is filled past the 100% mark.	Remove any excess regenerative so that the regenerative container is filled up to the 100% mark at most.
The product cannot be registered. The product cannot be connected to a network. The product cannot be added to the BWT Best Water Home app.	Lack of connectivity.	Check for faults during start-up (see chapter “14.1 Fault during start-up” , page 64). If the cause cannot be found, contact customer service (see chapter “15.1 Product returns” , page 68).

If the fault cannot be remedied by following these instructions, contact our customer service department.

You will need the serial number and production number, which can be found on the type plate on the underside of the Easy Fill technology cover. Keep these numbers handy when you contact after-sales service.

14.3 Faults affecting the additional functions

Fault	Possible source of the fault	Steps to resolve the fault
1 Fault when downloading the app	1.1 Link does not work	Check the Internet connection and the availability of the required app store on your smartphone. Try again. Make sure you have a QR code reader installed on your smartphone.
	1.2 Installation not possible (Android or iOS).	Check the version of your smartphone operating system. This must correspond to a supported version.
	1.3 Installation not possible.	Unfortunately, your operating system is not supported.
2 Registration in the app	2.1 Unable to log in to the app.	Check the Internet connection of your smartphone. Registration is only possible with an existing Internet connection.
		Check the registration details and, if necessary, reset the password you have chosen.
		Occasionally the servers have to be maintained. In this case, a service message is displaying indicating a time period for the maintenance. Try again after the time period has expired.
	2.2 Product is not displayed	Did you activate the product successfully? You will receive the e-mail confirming successful activation after completion of the activation process. If this is not the case, contact customer service.
	2.3 Device status and app do not match.	Please check the Internet connection of your product and also make sure that your smartphone is connected to the Internet.
		After activation for the first time or during operation, the status is calibrated just once a day via GSM. As a result, there may be deviations.
		If the deviations persist over a period of several days, contact customer service.
		Have the software version checked by customer service and update the software if necessary.
	2.4 You did not receive an execution message after triggering an action (Holiday mode, rinse, regenerate).	Triggering an action can take up to one hour. If this period has expired, check the Internet connection of your product and your smartphone. If an Internet connection is available and the period of one hour has expired, contact after-sales service.
	2.5 Holiday mode cannot be deactivated.	For safety reasons, holiday mode can only be deactivated on the product itself. Make the setting on the product.

15 Warranty

If the product malfunctions during the warranty period, please contact your contract partner, the installation company, and indicate the product type and production number (see specifications or the type plate on the product).

Non-compliance with the installation conditions and the responsibilities of the operator, as well as improper use leads to the loss of warranty and exclusion of liability.

15.1 Product returns

Product returns will not be processed without a return number (RMA no.). In Germany, you can receive a return number by contacting our customer service in Schriesheim.

Unauthorised returns of goods will not be accepted by BWT. Please always contact your contract partner first.

15.2 Your contact at BWT

You can reach us at the following number:

Service acceptance	+49 (0) 6203 7379
Monday to Thursday:	6:30 a.m. to 6:00 p.m.
Friday:	6:30 a.m. to 4:00 p.m.

16 Decommissioning and disposal

16.1 Decommissioning

The product may only be shut down and dismantled by qualified specialists.

Observe all applicable safety regulations when dismantling the system.

16.2 Disposal

NOTE



► This product may not be disposed of in household waste.

► At the end of the product's life cycle, ensure that it is properly disposed of or recycled.

► Observe the legal disposal guidelines for the country in which the product is used.

► The following materials are used in the product: metal, plastics, electronic components.



16.2.1 Disposal of the transport packaging

Recycling the packaging materials saves resources and reduces waste. Return the packaging to your specialised dealer.

16.2.2 Disposal of old devices

Do not dispose of the old device in household waste. Use the official municipal collection and returns facilities for electrical and electronic waste or return the device to your dealer. By law, you are responsible for deleting any personal data on the old device before disposal.

16.2.3 Disposal of old batteries

Batteries must never be disposed of in household waste. Old batteries that are not sealed inside the product must be removed and brought to a suitable collection point for disposal.


17 Technical data

BWT PerlaMAXX deluxe softener		
Nominal connection width	DN	32
Connection type		G 1¼"
Nominal capacity in accordance with EN 14743	mol (m ³ x °dH)	2 x 1.1 (2 x 6.2)
Capacity/kg of regenerative in accordance with EN 14743	mol	4,3
Peak flow when blending from 20 °dH to 0 °dH	m ³ /h	See chapter "17.2 Diagram of peak flow", page 71
Operating flow when blending from 20 °dH to 0 °dH	m ³ /h	1,0
Nominal flow in accordance with EN 14743	m ³ /h	3,2
Nominal pressure PN	bar	10
Min./max. operating pressure	bar	2 to 8
Pressure drop at operating flow	bar	0,2
Area of application according to DIN 1988-200	Residential units People	1 to 5 2 to 12
Ion exchange material fill quantity	l	2 x 3.2
Supply of regenerative, max.	kg	32
Regenerative consumption per 100% regeneration, approx.	kg	0,25
Rinsing water consumption per 100% regeneration at 4 bar, approx.	l	21
Rinsing water flow during regeneration, approx.	l/h	170
Duration of 100% regeneration per ion exchange tank, approx.	min.	21
Water temperature, min./max.	°C	5 to 25
Ambient temperature, min. – max. *	°C	5 to 40
Humidity	%	Non-condensing
Power supply	V / Hz	100 – 240 / 50 – 60
Unit voltage	VDC	24
Power during operation	W	5,6
Power during regeneration, max.	W	40
Fault message output Floating	VDC / A Max.	24 / 0.5
Protection class		IP54
Operating weight if filled to max.	kg	80
Shipping weight, approx.	kg	36
For the production number, see the label on the title page of this manual and the type plate under the Easy Fill technology cover of the product.		


* If the treated water is intended for human consumption as defined in the Trinkwasserverordnung [German Drinking Water Ordinance], the ambient temperature must not exceed 25 °C.

17.1 Dimensions

BWT PerlaMAXX deluxe softener			
Height	A	mm	797
Width	B	mm	394
Depth	C	mm	505
Water inlet connection height	D	mm	592
Water outlet connection height	E	mm	652
Overflow connection height	F	mm	410
Clearance to allow the technology cover to be opened	G	mm	400
Min. sewage system connection		DN	40

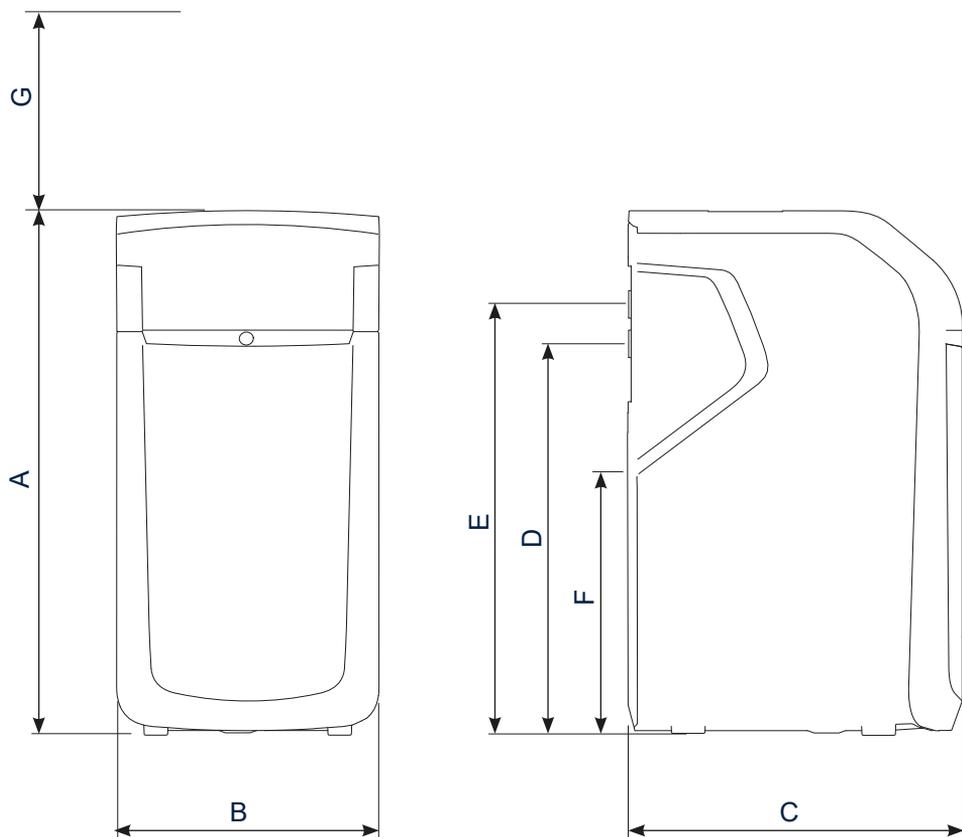

17.2 Diagram of peak flow

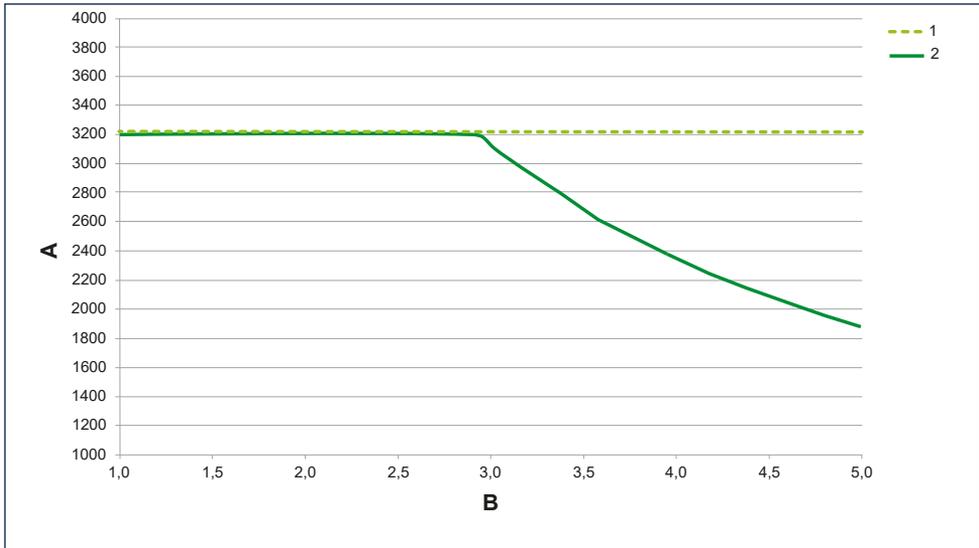

A	Peak flow [l/h]	
B	Inflow water hardness [mmol/l]	
1	BWT PerlaMAXX deluxe softener	1 bar pressure loss
2	BWT PerlaMAXX deluxe softener	Peak flow rate

Peak flow

The peak flow is the flow rate at which the product's outlet water hardness value is reduced to values less than 10% of the inflow water hardness for at least 10 minutes. The pressure difference may rise to greater than 1 bar.

Operating flow

The operating flow is the flow rate on which independent testing institutions based their capacity testing (see EN 14743 for details).

Nominal flow

The nominal flow rate is the volume flow at which the product causes a pressure drop of 1 bar at a water temperature of 15 °C when the blending is closed.

18 Standards and legal provisions

Standards and legal provisions shall always be applied in the most recent version.

The following standards and legal regulations must be observed depending on the intended use:

- German ordinance on the quality of water for human consumption (“Trinkwasserverordnung”)
- EN 806, Specifications for drinking water installations
- DIN 1988 standards, specifications for drinking water installations
- DIN EN 1717, protection of drinking water from contaminants in the drinking water supply system
- DIN EN 15161, Water conditioning equipment inside buildings – installation, operation, maintenance and repair

The product meets the following standards:

- EN 14743, Water conditioning equipment inside buildings – softeners
- DIN 19636-100, Water softeners (cation exchangers) for drinking water installation – Part 100: Requirements for use of softening units in accordance with EN 14743.

Information for inhabitants in accordance with the requirements of the German Drinking Water Ordinance

The drinking water in this building is treated as followed:

Type of treatment: Partial softening
 Metering

Product designation: _____

Installation location of the product: _____

Metering of silicate substances

For minimising the corrosiveness of drinking water and preventing elevated concentrations of heavy metals

Silicate concentration of your water, approx. _____ mg/l

Max. permissible concentration in accordance with the German Drinking Water Ordinance: 15 mg/l SiO₂ (calculated as SiO₂)

Metering of phosphate substances

To minimise liming, corrosiveness of drinking water and to prevent elevated concentrations of heavy metals

Phosphate concentration of your water, approx. _____ mg/l

Max. permissible concentration in accordance with the German Drinking Water Ordinance: 2.2 mg/l P (calculated as P)

Metering to set the pH value

For minimising the corrosiveness of drinking water and preventing elevated concentrations of heavy metals

pH value of your water _____

Limits in accordance with the German Drinking Water Ordinance: greater than 6.5 and less than 9.5

Metering of sodium hypochlorite or chlorine dioxide solution

To increase sanitary properties of drinking water

Chlorine or chlorine dioxide concentration of your water, approx. _____ mg/l

Max. permitted concentration in accordance with the German Drinking Water Ordinance: 0.3 mg/l chlorine or 0.2 mg/l chlorine dioxide

Partial softening of drinking water by sodium ion replacement

To minimise liming

Hardness range of your water: Soft (less than 8.4 °dH)
 Medium (8.4 °dH – 14.0 °dH)

Sodium concentration of your water, approx.: _____ mg/l

Max. permitted concentration in accordance with the German Drinking Water Ordinance: 200 mg/l Na

Company: _____

Date of last maintenance: _____

A Appendix

A.1 Connection set, DN 32/32 DVGW



A.1.1 Intended use

The corrugated hoses with G 1 1/4" internal threads may only be used to connect water softeners.

Corrugated hoses ensure a strain-free connection to the product. They eliminate the time-consuming process of adapting and fitting metal pipes for this purpose.

A.1.2 Conditions for installation

Corrugated hoses are only suitable for drinking water installations. The chloride content of the water must not exceed 250 mg/l.

Corrugated hoses must not be shortened.

Never strain or twist the corrugated hoses during installation. Do not try to fold or squeeze them.

The minimum bending radius of the hoses is 50 mm.

The corrugated hoses are not to come into contact with plaster, cement, salt or other corrosive materials.

Do not install the corrugated hoses in water. The outer surface must remain dry.

Both ends of the hose must have access to air for the installation.







If necessary, the corrugated hoses can be insulated against splash water. Make sure the hoses are dry when attaching the insulation covering.

The space between the corrugated hoses and the insulation covering must be free of any air pockets.

Non-compliance with the installation conditions and the operator responsibilities voids the warranty.

A.1.3 Installation

Failure to follow the installation instructions will adversely affect the product life of the hoses and void the warranty in the event of damage.

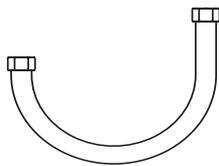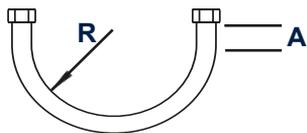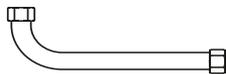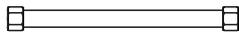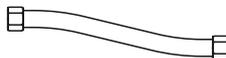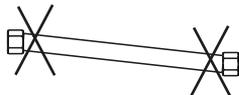**correct****correct****correct****correct****correct****wrong**

A.1.3.1 Installation instructions

The straight path **A** must measure at least 30 mm.
The bending radius **R** must be at least 50 mm.

Never twist or pull the corrugated hoses.

During installation and the period thereafter, the hoses must not be subject to any external pressure or elongation.

► Only use matching spanners for the hexagon nuts. Do not use a pipe wrench!

► Join the water softener and connection fitting using both corrugated hoses and seal the connections.

Hose for hard water (outgoing arrow on the connection fitting, incoming arrow on the product).

Hose for soft water (outgoing arrow on the product, incoming arrow on the connection fitting).


Note:

According to DIN 1988, the flushing water and overflow hoses must be connected to the sewage water system at least 20 mm above the highest waste water level (unimpeded drainage).

A.2 Installation set for water softeners

The installation set complies with the requirements of standard EN 1717.

- ▶ If necessary, put the rubber sleeve (1) on the DN40 pipe as shown.
- ▶ Place the coupling nut with the sealing ring (2) on the pipe and screw it to the siphon.
- ▶ Position the overflow hose connection (3) at least 20 mm below the height of the overflow point of the water softener.
- ▶ Route the rinsing water hose with an incline to the connection (4) and push it in by 90 mm.
- ▶ Route the overflow hose from the regenerative container to the connection (1), attach it and secure it with a hose clamp.

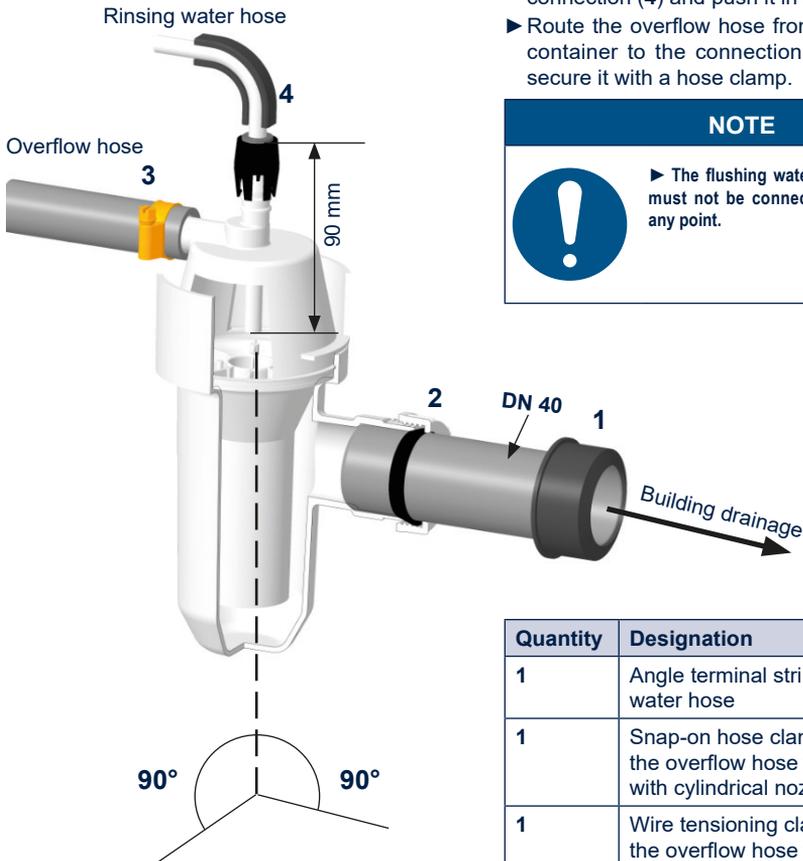

NOTE



▶ The flushing water and overflow hoses must not be connected or constricted at any point.

Quantity	Designation
1	Angle terminal strip for the rinsing water hose
1	Snap-on hose clamp for attaching the overflow hose to the container with cylindrical nozzle
1	Wire tensioning clamp for attaching the overflow hose to the container with conical nozzle
4	Flat gaskets for corrugated hoses

EU-Konformitäts-Erklärung

EU Declaration of Conformity

UE Déclaration de conformité

im Sinne der Richtlinien

EMV
Funkanlagen-Richtlinie
RoHS

2014/30/EU
2014/53/EU
2011/65/EU

according to the directives

EMC
RED
RoHS

2014/30/EU
2014/53/EU
2011/65/EU

en accord avec les directives

CEM
Équipements radio
RoHS

2014/30/UE
2014/53/UE
2011/65/UE

Produkt / Product / Produit:

Duplex Weichwasseranlage
Duplex softening unit
Duplex systèmes d'adoucissement d'eau

Typ, Baureihe / Type, Series / Type, Série:

BWT PerlaMAXX deluxe

ist entwickelt, konstruiert und gefertigt in Übereinstimmung mit den oben genannten Richtlinien, in alleiniger Verantwortung von

is developed, designed and produced according to the above mentioned directives at the entire responsibility of

est développé, conçu et fabriqué en accord avec les directives mentionnées ci-dessus sous l'entière responsabilité de

BWT Wassertechnik GmbH, Industriestr. 7, 69198 Schriesheim

(WEEE-Reg._Nr. DE 80428986)



Schriesheim, Juli 2025

Dr. Monique Bissen

Ort, Datum / Place, date / Lieu et date

Unterschrift (Geschäftsleitung)
Signature (Management)
Signature (Direction)



Further information:

BWT Holding GmbH

Walter-Simmer-Strasse 4

5310 Mondsee, Austria

Phone: +43 / 6232 / 5011 0

E-mail: office@bwt.at

BWT Wassertechnik GmbH

Industriestrasse 7

69198 Schriesheim, Germany

Phone: +49 / 6203 / 73 0

E-mail: bwt@bwt.de